


# CE USV-24-300T

HYDRO PRO UNIVERSAL STRAIGHT BODY  
VALVE TESTER

OPERATING MANUAL

ORIGINAL INSTRUCTIONS

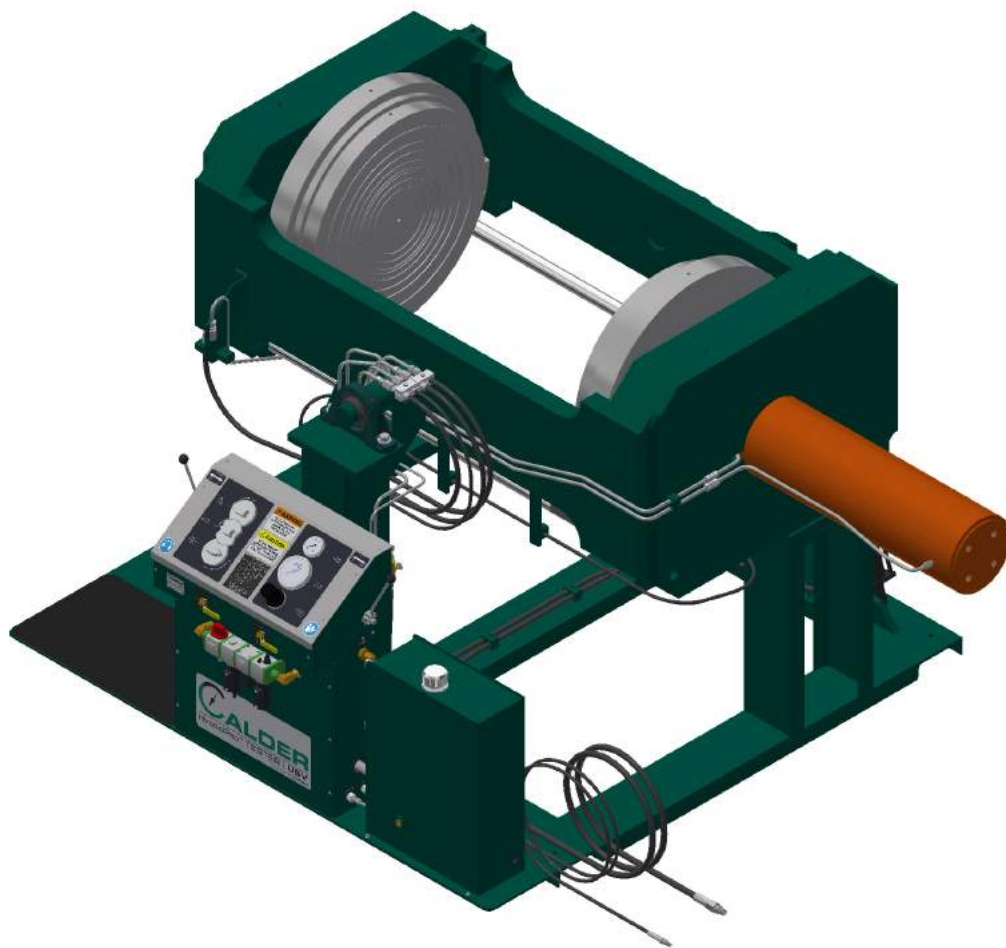

 **CALDER**  
VALVE TESTING & REPAIR SYSTEMS BY CLIMAX

P/N 90103  
October 2017  
Revision 0

   **H&S** TOOL



©2017 CLIMAX or its subsidiaries.  
All rights reserved.

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded, or stored in any storage medium, without the express prior written consent of CLIMAX. CLIMAX hereby grants permission to download a single copy of this manual and of any revision hereto onto an electronic storage medium to be viewed and to print one copy of this manual or any revision hereto, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is prohibited.

**At CLIMAX, we value your opinion.**

For comments or questions about this manual or other CLIMAX documentation, please e-mail [documentation@cpmt.com](mailto:documentation@cpmt.com).

For comments or questions about CLIMAX products or services, please call CLIMAX or e-mail [info@cpmt.com](mailto:info@cpmt.com). For quick and accurate service, please provide your representative with the following:

- Your name
- Shipping address
- Telephone number
- Machine model
- Serial number (if applicable)
- Date of purchase

***CLIMAX World Headquarters***

2712 East 2nd Street  
Newberg, Oregon 97132 USA  
  
Telephone (worldwide): +1-503-538-2815  
Toll-free (North America): 1-800-333-8311  
Fax: 503-538-7600

***CLIMAX | H&S Tool (UK Headquarters)***

Unit 7 Castlehill Industrial Estate  
Bredbury Industrial Park  
Horsfield Way  
Stockport SK6 2SU, UK  
  
Telephone: +44 (0) 161-406-1720

***CLIMAX | H&S Tool (Asia Pacific Headquarters)***

316 Tanglin Road #02-01  
Singapore 247978  
  
Telephone: +65-9647-2289  
Fax: +65-6801-0699

***H&S Tool World Headquarters***

715 Weber Dr.  
Wadsworth, OH 44281 USA  
  
Telephone: +1-330-336-4550  
Fax: 1-330-336-9159  
[hstool.com](http://hstool.com)


***CLIMAX | H&S Tool (European Headquarters)***

Am Langen Graben 8  
52353 Düren, Germany  
  
Telephone: +49 (0) 242-191-7712  
E-mail: [info@cpmt.de](mailto:info@cpmt.de)

***CLIMAX | H&S Tool (Middle East Headquarters)***

Warehouse #5, Plot: 369 272  
Um Sequim Road  
Al Quoz 4  
PO Box 414 084  
Dubai, UAE  
  
Telephone: +971-04-321-0328

# CLIMAX GLOBAL LOCATIONS

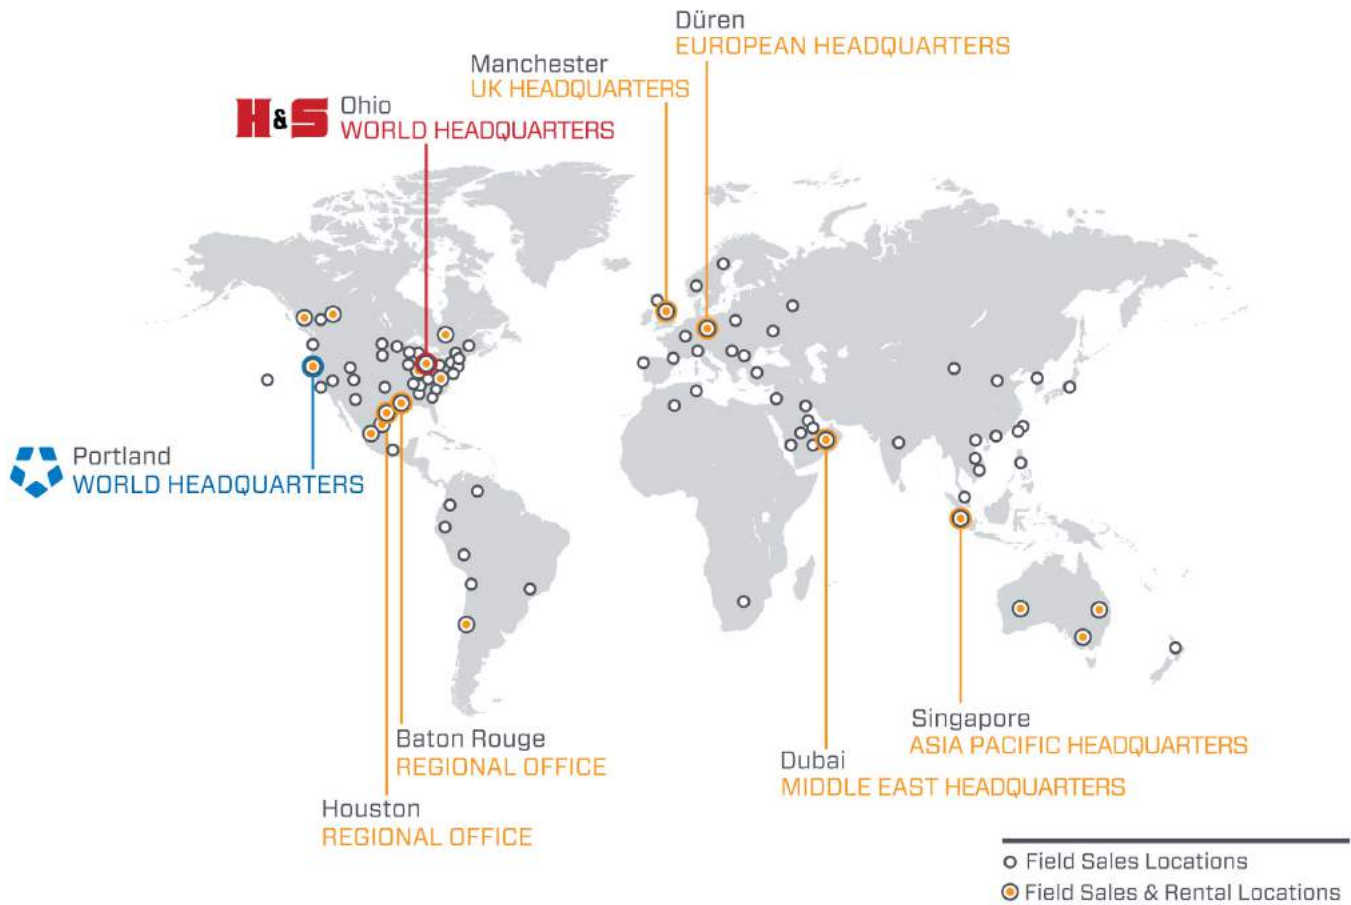

# CE DOCUMENTATION

## DECLARATION OF CONFORMITY



**2006/42/EC Machinery Directive**



**Name of manufacturer or supplier**

Climax Portable Machining and Welding Systems

**Full postal address including country of origin**

2712 E. Second St., Newberg, OR 97132, USA

**Description of product**

UNIVERSAL STRAIGHT VALVE TESTER; MODEL 600

**Name, type or model, batch or serial number**

MODEL 600; P/N'S 88572, 88576, 88018,  
88271, 87988, 87989, 88573, 88577, 88574,  
88578, 88575, 88579, 88591, 88581, 88272,  
88273, 88990, 87991, 88592, 88583, 88593,  
88586, 88594, 88590, 89021

**Standards used, including number, title, issue date and other relative documents**

EN 349, EN 3744, EN 11201, EN 12100-1, EN 13849-1, EN 14121-1

**Name of Responsible Person within the EU**

Tom Cunningham

**Full postal address if different from manufacturers**

Climax GmbH  
Am Langen Graben 8  
52353 Duren, Germany

**Declaration**

I declare that as the Manufacturer, the above information in relation to the supply / manufacture of this product, is in conformity with the stated standards and other related documents following the provisions of the above Directives and their amendments.

Signature of Manufacturer: \_\_\_\_\_

  
Scott J. Thiel

Position Held:

Director of Engineering; Research & Development

Date: June 21, 2017



---

# LIMITED WARRANTY

CLIMAX Portable Machine Tools, Inc. (hereafter referred to as “CLIMAX”) warrants that all new machines are free from defects in materials and workmanship. This warranty is available to the original purchaser for a period of two years after delivery. If the original purchaser finds any defect in materials or workmanship within the warranty period, the original purchaser should contact its factory representative and return the entire machine, shipping prepaid, to the factory. CLIMAX will, at its option, either repair or replace the defective machine at no charge and will return the machine with shipping prepaid.

CLIMAX warrants that all parts are free from defects in materials and workmanship, and that all labor has been performed properly. This warranty is available to the customer purchasing parts or labor for a period of 90 days after delivery of the part or repaired machine or 180 days on used machines and components. If the customer purchasing parts or labor finds any defect in materials or workmanship within the warranty period, the purchaser should contact its factory representative and return the part or repaired machine, shipping prepaid, to the factory. CLIMAX will, at its option, either repair or replace the defective part and/ or correct any defect in the labor performed, both at no charge, and return the part or repaired machine shipping prepaid.

These warranties do not apply to the following:

- Damage after the date of shipment not caused by defects in materials or workmanship
- Damage caused by improper or inadequate machine maintenance
- Damage caused by unauthorized machine modification or repair
- Damage caused by machine abuse
- Damage caused by using the machine beyond its rated capacity

All other warranties, express or implied, including without limitation the warranties of merchantability and fitness for a particular purpose are disclaimed and excluded.

## ***Terms of sale***

Be sure to review the terms of sale which appear on the reverse side of your invoice. These terms control and limit your rights with respect to the goods purchased from CLIMAX.

## ***About this manual***

CLIMAX provides the contents of this manual in good faith as a guideline to the operator. CLIMAX cannot guarantee that the information contained in this manual is correct for applications other than the application described in this manual. Product specifications are subject to change without notice.

# TABLE OF CONTENTS

<b>CHAPTER/SECTION</b>	<b>PAGE</b>
<b>1 INTRODUCTION</b> -----	<b>1</b>
1.1 HOW TO USE THIS MANUAL . . . . .	1
1.2 SAFETY ALERTS . . . . .	1
1.3 GENERAL SAFETY PRECAUTIONS . . . . .	2
1.4 MACHINE-SPECIFIC SAFETY PRECAUTIONS . . . . .	3
1.5 RISK ASSESSMENT AND HAZARD MITIGATION . . . . .	4
1.6 RISK ASSESSMENT CHECKLIST . . . . .	5
1.7 LABELS . . . . .	6
1.7.1 Label identification . . . . .	6
1.7.2 Label location . . . . .	7
<b>2 OVERVIEW</b> -----	<b>9</b>
2.1 FEATURES AND COMPONENTS . . . . .	9
2.2 CONTROLS . . . . .	10
2.3 DIMENSIONS . . . . .	10
2.4 SPECIFICATIONS . . . . .	12
2.5 ITEMS REQUIRED BUT NOT SUPPLIED . . . . .	13
<b>3 SETUP</b> -----	<b>15</b>
3.1 RECEIPT AND INSPECTION . . . . .	15
3.2 SECURING THE TEST STAND . . . . .	15
3.2.1 Cement in place (option 1 – recommended) . . . . .	16
3.2.2 Drill and anchor (option 2) . . . . .	16
3.3 FILLING THE LUBRICATOR AND HYDRAULIC TANK . . . . .	16
3.4 CONNECTING TO THE TEST PRESSURE SOURCE . . . . .	17
3.5 CONNECTING THE UTILITIES . . . . .	18
3.6 CONFIGURING THE SEAL PLATES . . . . .	18
<b>4 OPERATION</b> -----	<b>19</b>
4.1 PRE-OPERATION CHECKS . . . . .	19
4.2 CLAMPING A VALVE . . . . .	20
4.3 TILTING A VALVE . . . . .	23
4.4 PRE-TESTING . . . . .	24
4.5 TESTING . . . . .	24
4.6 POST-TESTING . . . . .	25
4.7 UNCLAMPING A VALVE . . . . .	25
<b>5 MAINTENANCE</b> -----	<b>27</b>
5.1 MAINTENANCE CHECKLIST . . . . .	27
5.2 CHECKING FOR HYDRAULIC LEAKAGE . . . . .	27
<b>6 STORAGE AND SHIPPING</b> -----	<b>29</b>

---

# TABLE OF CONTENTS (CONTINUED)

<b>CHAPTER/SECTION</b>	<b>PAGE</b>
6.1 STORAGE .....	29
6.2 DECOMMISSIONING .....	29
<b>APPENDIX A ASSEMBLY DRAWINGS - - - - -</b>	<b>31</b>
<b>APPENDIX B SCHEMATICS - - - - -</b>	<b>49</b>
<b>APPENDIX C SDS - - - - -</b>	<b>51</b>



# LIST OF FIGURES

<b>FIGURE</b>	<b>PAGE</b>
1-1 Console label locations . . . . .	7
1-2 Clamp box left label location . . . . .	7
1-3 Rear clamp box and frame label locations . . . . .	8
2-1 Components . . . . .	9
2-2 Console controls . . . . .	10
2-3 Lower console controls . . . . .	10
2-4 Clamp fixture dimensions . . . . .	11
3-1 Securing the test stand . . . . .	16
A-1 USV-24-300T clamp fixture assembly (P/N 88574) . . . . .	32
A-2 Control console USV assembly front (P/N 89020) . . . . .	33
A-3 Control console USV assembly back (P/N 89020) . . . . .	34
A-4 Control console USV assembly parts list 1 (P/N 89020) . . . . .	35
A-5 Control console USV assembly parts list 2 (P/N 89020) . . . . .	36
A-6 USV-24-300T assembly 1 (P/N 89889) . . . . .	37
A-7 USV-24-300T assembly 2 (P/N 89889) . . . . .	38
A-8 USV-24-300T assembly parts list 1 (P/N 89889) . . . . .	40
A-9 USV-24-300T assembly parts list 2 (P/N 89889) . . . . .	41
A-10 Tilt model kit assembly (P/N 90056) . . . . .	42
A-11 Tilt model kit parts list (P/N 90056) . . . . .	43
A-12 Easy out holder assembly (P/N 89975) . . . . .	44
A-13 Fixed seal plates kit assembly (P/N 90104) . . . . .	45
A-14 Seal plates easy-out O-ring kit (P/N 88671) . . . . .	46
B-1 Schematic P/N 89028 . . . . .	49

---

This page intentionally left blank

# LIST OF TABLES

<b>TABLE</b>	<b>PAGE</b>
1-1 Risk assessment checklist before set-up . . . . .	5
1-2 Risk assessment checklist after set-up . . . . .	5
1-3 labels . . . . .	6
2-1 Specifications . . . . .	12
2-2 Valve size and pressure coverage . . . . .	13
4-1 USV-24-300T clamping pressure . . . . .	22
5-1 Maintenance intervals and tasks . . . . .	27
A-1 Kit – non-tilt (P/N 88276) . . . . .	47
A-2 Spare parts list . . . . .	47

---

This page intentionally left blank

# 1 INTRODUCTION

**IN THIS CHAPTER:**

- 1.1 HOW TO USE THIS MANUAL - - - - - 1
- 1.2 SAFETY ALERTS - - - - - 1
- 1.3 GENERAL SAFETY PRECAUTIONS - - - - - 2
- 1.4 MACHINE-SPECIFIC SAFETY PRECAUTIONS - - - - - 3
- 1.5 RISK ASSESSMENT AND HAZARD MITIGATION - - - - - 4
- 1.6 RISK ASSESSMENT CHECKLIST - - - - - 5
- 1.7 LABELS - - - - - 6
  - 1.7.1 LABEL IDENTIFICATION - - - - - 6
  - 1.7.2 LABEL LOCATION - - - - - 7

## 1.1 HOW TO USE THIS MANUAL

This manual describes information necessary for the setup, operation, maintenance, storage, shipping, and decommissioning of the USV-24-300T.

The first page of each chapter includes a summary of the chapter contents to help you locate specific information. The appendices contain supplemental product information to aid in setup, operation, and maintenance tasks.

Read this entire manual to familiarize yourself with the USV-24-300T before attempting to set it up or operate it.

## 1.2 SAFETY ALERTS

Pay careful attention to the safety alerts printed throughout this manual. Safety alerts will call your attention to specific hazardous situations that may be encountered when operating this machine.

Examples of safety alerts used in this manual are defined here<sup>1</sup>:



indicates a hazardous situation which, if not avoided, **WILL** result in death or severe injury.



indicates a hazardous situation which, if not avoided, **COULD** result in death or severe injury.

---

1. For more information on safety alerts, refer to *ANSI/NEMA Z535.6-2011, Product safety Information in Product Manuals, Instructions, and Other Collateral Materials*.

---

 **CAUTION**

indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

**NOTICE**

indicates a hazardous situation which, if not avoided, could result in property damage, equipment failure, or undesired work results.

---

## 1.3 GENERAL SAFETY PRECAUTIONS

CLIMAX leads the way in promoting the safe use of portable machine tools and valve testers. Safety is a joint effort. You, the end user, must do your part by being aware of your work environment and closely following the operating procedures and safety precautions contained in this manual, as well as your employer's safety guidelines.

Observe the following safety precautions when operating or working around the machine.

**Training** – Before operating this or any machine tool, you should receive instruction from a qualified trainer. Contact CLIMAX for machine-specific training information.

**Risk assessment** – Working with and around this machine poses risks to your safety. You, the end user, are responsible for conducting a risk assessment of each job site before setting up and operating this machine.

**Intended use** – Use this machine in accordance with the instructions and precautions in this manual. Do not use this machine for any purpose other than its intended use as described in this manual.

**Personal protective equipment** – Always wear appropriate personal protective gear when operating this or any other machine tool.

**Work area** – Keep the work area around the machine clear of clutter. Restrain cords and hoses connected to the machine. Keep other cords and hoses away from the work area.

**Lifting** – Many CLIMAX machine components are very heavy. Whenever possible, lift the machine or its components using proper hoisting equipment and rigging. Always use designated lifting points on the machine.

**Lock-out/tag-out** – Lock-out and tag-out the machine before performing maintenance.

**Moving parts** – CLIMAX machines have numerous exposed moving parts and interfaces that can cause severe impact, pinching, cutting, and other injuries. Except for stationary operating controls, avoid contact with mov-

ing parts by hands or tools during machine operation. Remove gloves and secure hair, clothing, jewelry, and pocket items to prevent them from becoming entangled in moving parts.

---

## 1.4 MACHINE-SPECIFIC SAFETY PRECAUTIONS

**Eye hazard** – This machine may produce liquid spray during operation. Always wear eye protection when operating the machine.

**Sound level** – This machine produces potentially harmful sound levels. Hearing protection is required when operating this machine or working around it.

**Hazardous environments** – Do not operate the machine in environments where potentially explosive materials, toxic chemicals, or radiation may be present.

**Pressurization** – Do not over-pressurize the valve test system beyond the limits described in this manual and on machine labels. Do not pressurize the system while the side panels are removed from the test console.

**Test gauges** – Do not use any gauge above its rating. Do not remove test gauges while the system is pressurized.

**Utility service requirements** – Do not exceed the pressure ratings stated in this manual and on the machine labels.

### **WARNING**

This machine is equipped with interlocking valve control knobs to prevent accidental release of clamp pressure while the valve under test is pressurized.

Do not operate this machine if these interlocking knobs are missing, damaged, or altered. Doing so could result in property damage or personnel injury.

---

## **1.5 RISK ASSESSMENT AND HAZARD MITIGATION**

To achieve the intended results and to promote safety, the operator must understand and follow the design intent, set-up, and operation practices that are unique to Hydro Pro Universal Straight Body Valve Testers.

The operator must perform an overall review and on-site risk assessment of the intended application. Due to the unique nature of hydrostatic testing, identifying one or more hazard that must be addressed is typical.

When performing the on-site risk assessment, it is important to consider the valve tester and the workpiece as a whole.



## 1.6 RISK ASSESSMENT CHECKLIST

The following checklist is not intended to be an all inclusive list of things to watch out for when setting up and operating this Hydro Pro Universal Straight Body Valve Tester. However, these checklists are typical of the types of risks the assembler and operator should consider. Use these checklists as part of your risk assessment:

**TABLE 1-1. RISK ASSESSMENT CHECKLIST BEFORE SET-UP**

<b>Before set-up</b>	
<input type="checkbox"/>	I took note of all the warning labels on the machine.
<input type="checkbox"/>	I removed or mitigated all identified risks (such as tripping, cutting, crushing, entanglement, shearing, or falling objects).
<input type="checkbox"/>	I considered the need for personnel safety guarding and installed any necessary guards.
<input type="checkbox"/>	I considered the potential hazards that are inherent in high-pressure valve testing, including the possibility of high velocity fluid escape or workpiece fragmentation, and have installed appropriate protective barriers.
<input type="checkbox"/>	I read the machine assembly instructions (Section 3) and took inventory of all the items required but not supplied (Section 2.3).
<input type="checkbox"/>	I considered how this machine operates and identified the best placement for the controls, cabling, and the operator.
<input type="checkbox"/>	I evaluated and mitigated any other potential risks specific to my work area.

**TABLE 1-2. RISK ASSESSMENT CHECKLIST AFTER SET-UP**

<b>After set-up</b>	
<input type="checkbox"/>	I checked that the machine is safely installed (according to Section 3).
<input type="checkbox"/>	I identified all possible pinch points, such as those caused by rotating parts, and informed the affected personnel.
<input type="checkbox"/>	I followed the required maintenance checklist (Section 5).
<input type="checkbox"/>	I checked that all affected personnel have the recommended personal protective equipment, as well as any site-required or regulatory equipment.
<input type="checkbox"/>	I checked that all affected personnel understand and are clear of the danger zone.
<input type="checkbox"/>	I evaluated and mitigated any other potential risks specific to my work area.

## 1.7 LABELS

### 1.7.1 Label identification

The following warning and identification labels should be on your machine. If any are defaced or missing, contact CLIMAX immediately for replacements.

TABLE 1-3. LABELS

 <p>CLIMAX Portable Machining &amp; Welding Systems www.climaxusa.com Wood River, Illinois 61890 1-800-241-3133 CLIMAX, Inc. 2010</p>	<p>P/N 29154 ID plate</p>		<p>P/N 81008 Warning label: wear ear and eye protection</p>
 <p><b>WARNING</b> DO NOT RELEASE CLAMP WHILE VALVE UNDER TEST IS PRESSURIZED P/N 85417</p>	<p>P/N 85417 Warning label: do not release clamp while pressurized</p>		<p>P/N 85437 Warning label: hand crush haz- ard</p>
	<p>P/N 87593 Warning label: read the operat- ing manual</p>	 <p><b>CALDER</b> HYDROPRO™ TESTER   USV Powered by CLIMAX</p>	<p>P/N 88808 Calder USV plate</p>
 <p><b>CAUTION</b> DO NOT REMOVE LIFTING DEVICE FROM THE TEST VALVE UNTIL IT IS FULLY CLAMPED P/N 89122</p>	<p>P/N 89122 Warning label: leave lifting device until fully clamped</p>		<p>P/N 89123 Warning label: overhead danger</p>

## 1.7.2 Label location

The following figures display the location of the labels on each of the components of the USV-24-300T. For further identification of location placement, refer to the exploded views in Appendix A.

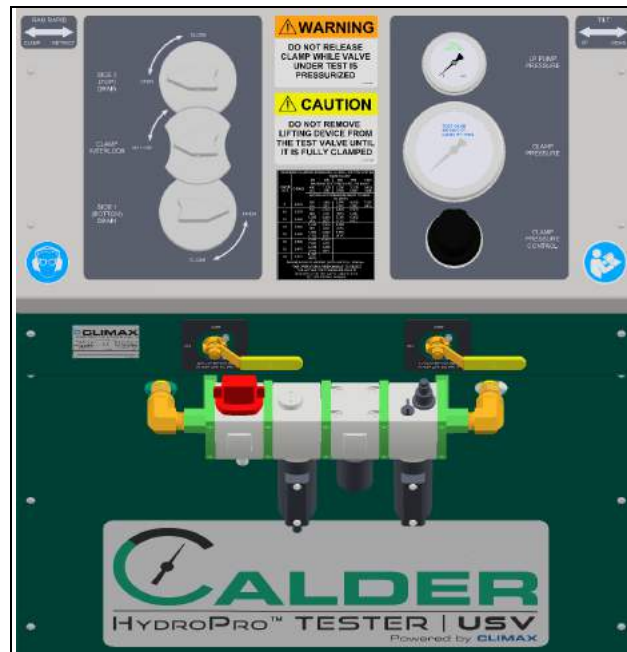


FIGURE 1-1. CONSOLE LABEL LOCATIONS

Label P/N: 29154, 81008, 85417, 87593, 88808, 89122

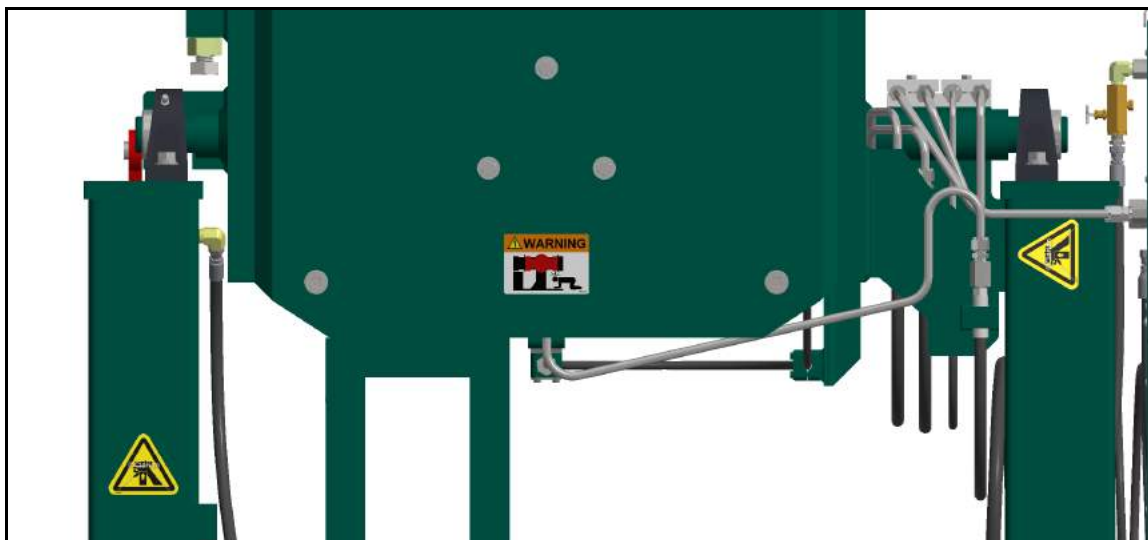


FIGURE 1-2. CLAMP BOX LEFT LABEL LOCATION

Label P/N: 85437, 89123



**FIGURE 1-3. REAR CLAMP BOX AND FRAME LABEL LOCATIONS**

Label P/N: 85437

# 2 OVERVIEW

## IN THIS CHAPTER:

2.1 FEATURES AND COMPONENTS	9
2.2 CONTROLS	10
2.3 DIMENSIONS	10
2.4 SPECIFICATIONS	12
2.5 ITEMS REQUIRED BUT NOT SUPPLIED	13

## 2.1 FEATURES AND COMPONENTS

The USV-24-300T clamp fixture is a valve testing system that hydraulically clamps and seals straight-body valves for hydrostatic and low-pressure air testing. It may be pressurized from a variety of hydrostatic pressure sources up to 9700 psi (669 bar) and low-pressure air sources up to 125 psi (8.6 bar).

Principle components are shown in Figure 2-1.

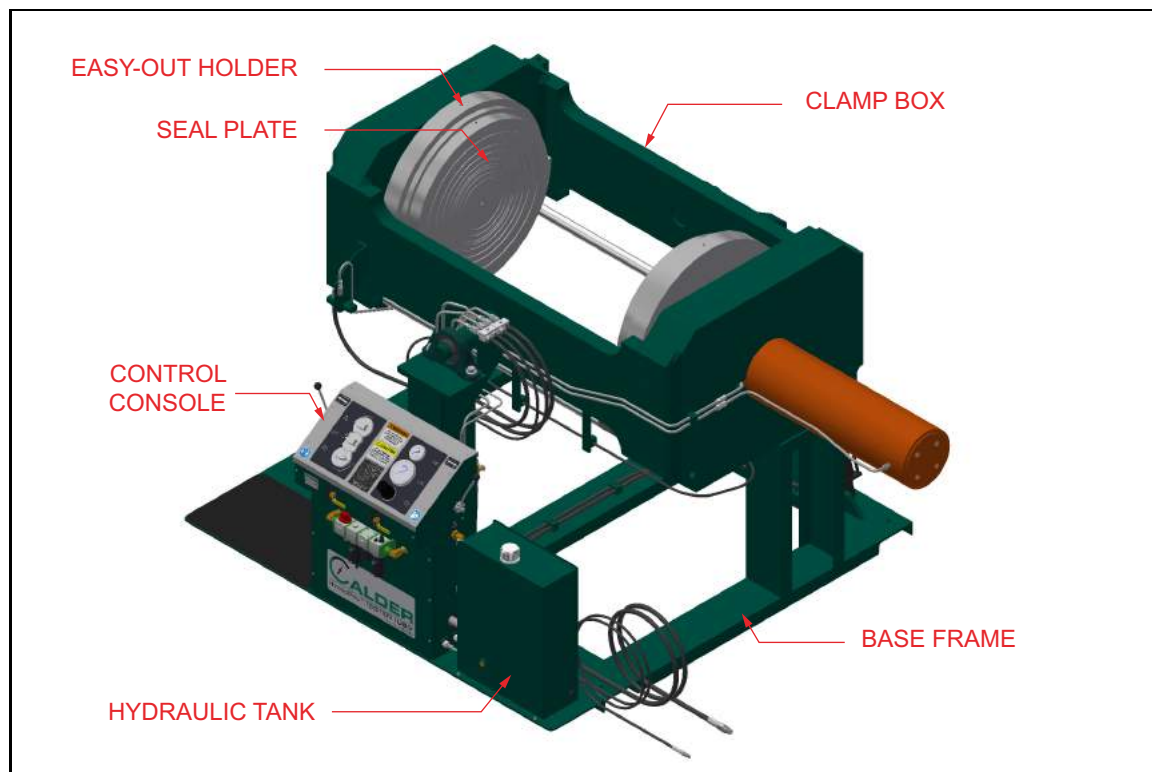


FIGURE 2-1. COMPONENTS

Features include:

**Safety interlock**– This feature prevents accidental release of valve clamp hydraulic pressure which the valve under test is pressurized.

**Multiple leakage test types**—Connection points to both ends of the valve under test equip this machine for shell and seat leakage tests.

**Hydraulic tilting**—This option is available to tilt the valve under test from horizontal to vertical for optimal valve pre-filling with water.

**Easy-out seal plate holder**—This option is available for easy change-out of seal plates when different styles of seal plates are used.

## 2.2 CONTROLS

The controls are all located on the machine (shown in Figure 2-2).

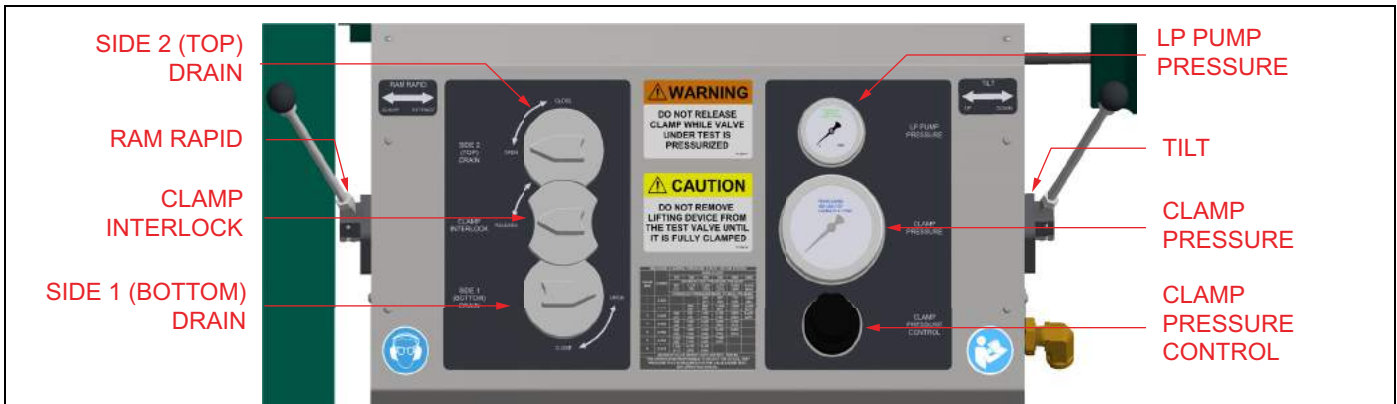


FIGURE 2-2. CONSOLE CONTROLS

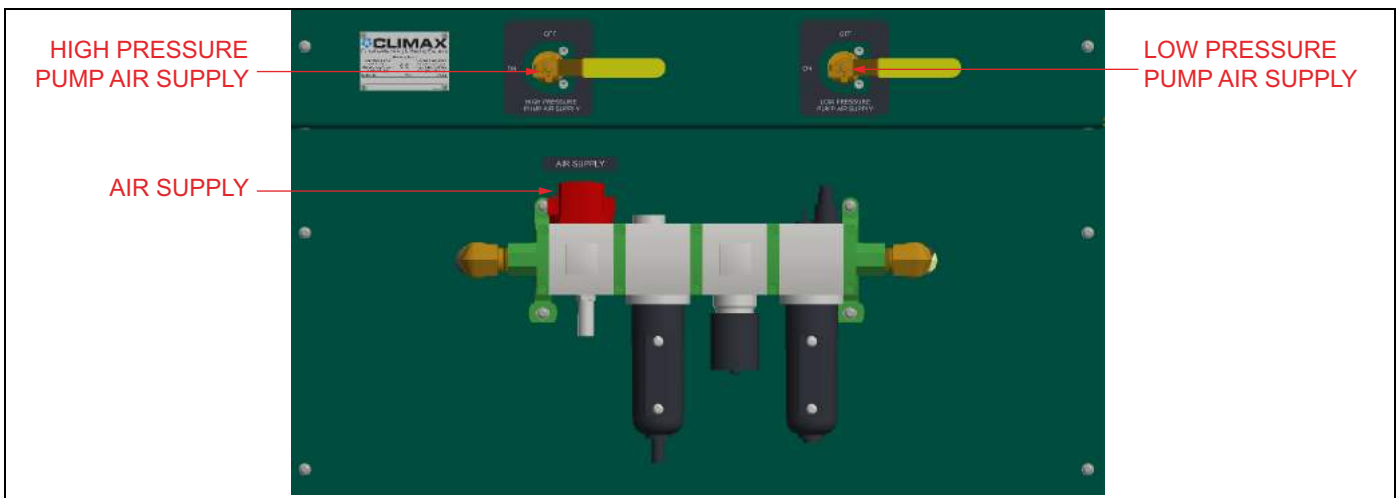


FIGURE 2-3. LOWER CONSOLE CONTROLS

## 2.3 DIMENSIONS

Figure 2-4 shows the machine dimensions.

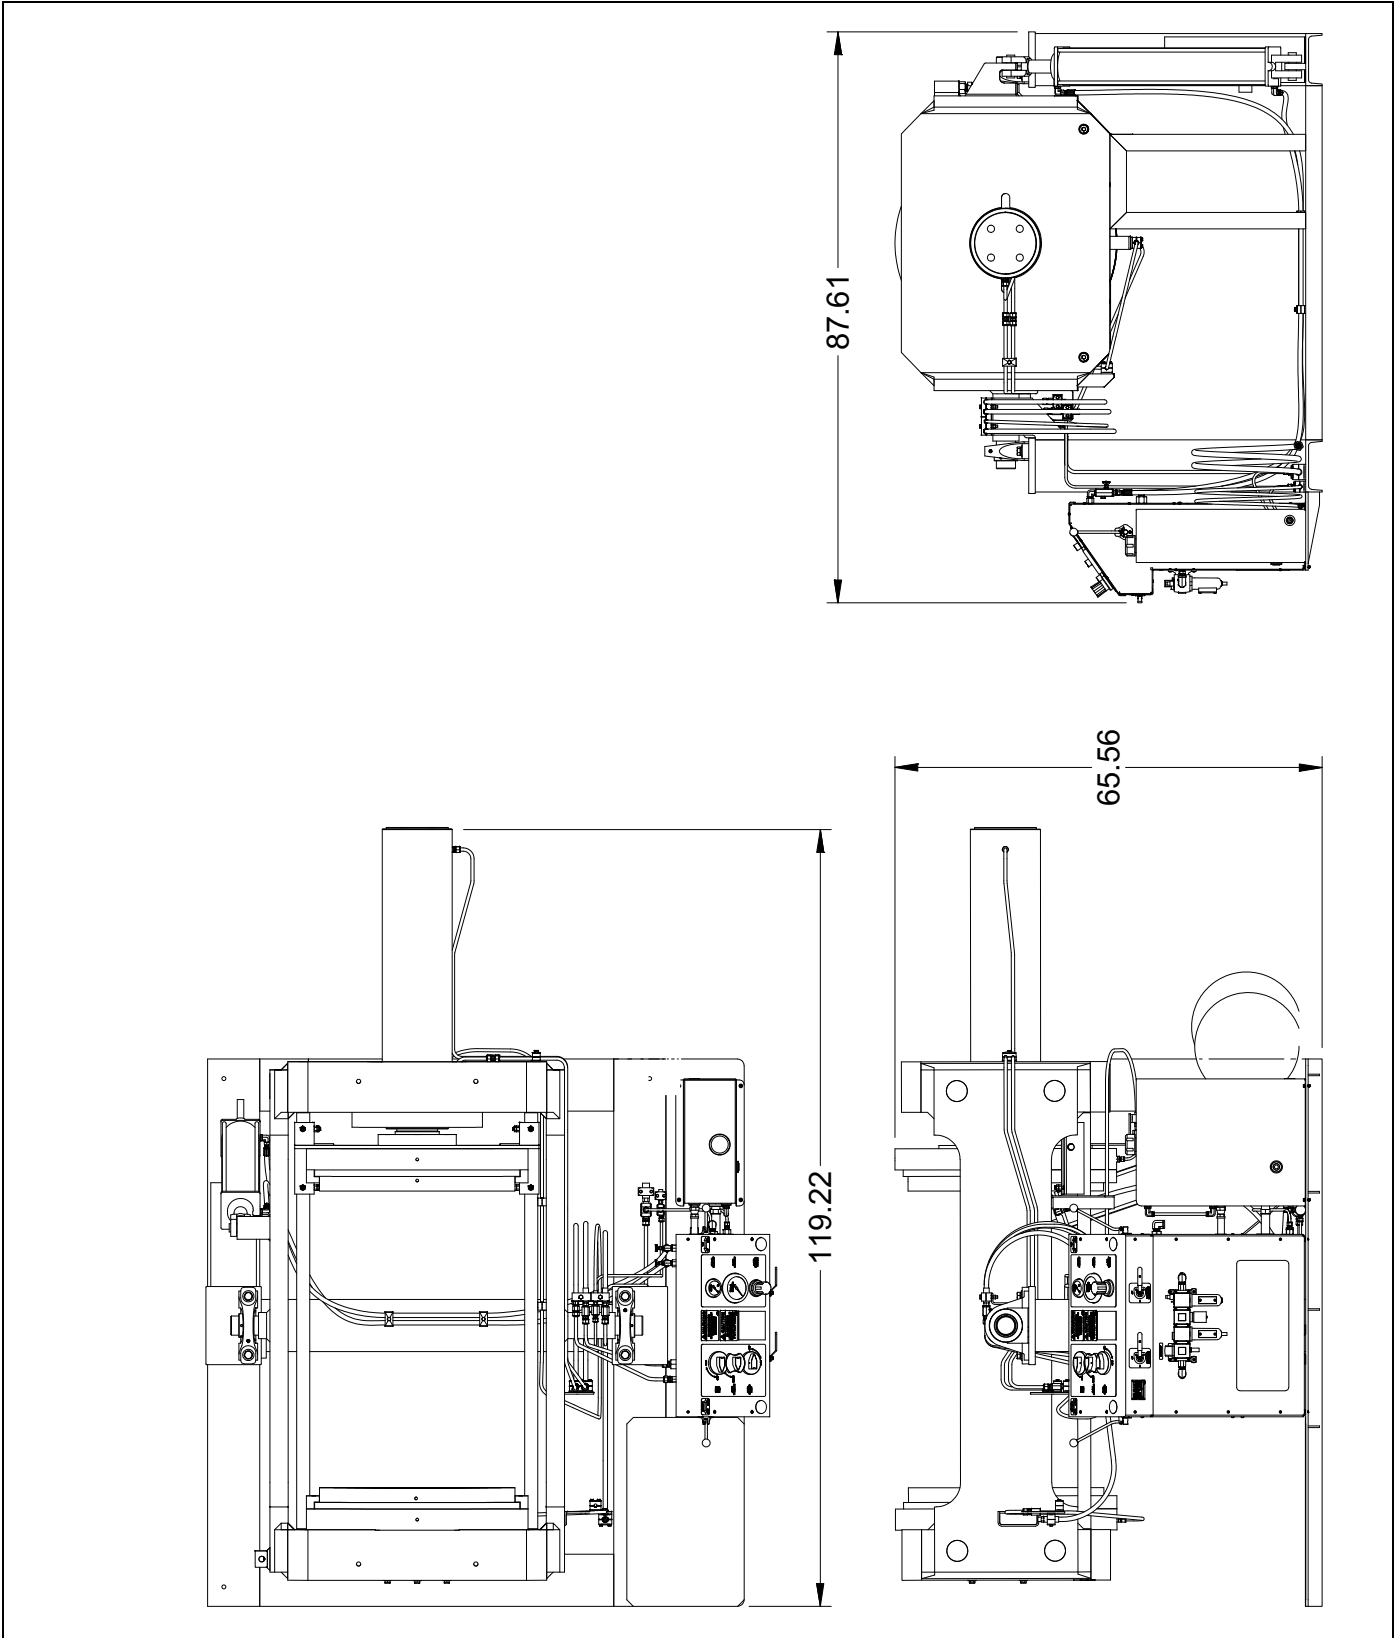


FIGURE 2-4. CLAMP FIXTURE DIMENSIONS

---

## 2.4 SPECIFICATIONS

Table 2-1 and Table 2-2 provides the operating specifications. See the marketing literature for additional information.

**TABLE 2-1. SPECIFICATIONS**

<b>Test media:</b>	Water, air, glycol, water soluble oil blends
<b>Maximum water test pressure:</b>	9,700 psi (669 bar)
<b>Maximum air test pressure:</b>	125 psi (8.6 bar)
<b>Types of valves that can be tested:</b>	Straight pattern ball, globe, gate, butterfly, and check valves <sup>1</sup>
<b>Shop air required:</b>	100–150 psi at 40 scfm (6.9–10.3 bar at 1.13 m <sup>3</sup> /min)
<b>Water quick fill:</b>	3 gpm (11 l/min) minimum
<b>Maximum opening between seal plates:</b>	45" (1,143 mm)
<b>Minimum opening between seal plates:</b>	10" (254 mm)
<b>Maximum inside width:</b>	38" (965 mm)
<b>Hydraulic ram force:</b>	300 tons (272.2 tonnes)
<b>Approximate machine weight</b>	12,300 lbs (5,579 kg)
<b>Approximate shipped weight</b>	12,600 lbs (5,715 kg)

1. Special seal plate adapters may be required to seal against the valve or to prevent external loading of the valve body when clamping.

### **WARNING**

Do not use the machine in any application that exceeds these operating specifications. Failure to follow these guidelines could result in personnel injury and property damage, and will void the warranty.



**TABLE 2-2. VALVE SIZE AND PRESSURE COVERAGE**

Valve size (nominal)	ASME class				
	150	300	600	900	1500
	Maximum test pressure				
	450 psi (31 bar)	1125 psi (78 bar)	2250 psi (155 bar)	3375 psi (233 bar)	5625 psi (388 bar)
8"	X	X	X	X	X
10"	X	X	X	X	
12"	X	X	X	X	
14"	X	X	X		
16"	X	X	X		
18"	X	X			
20"	X	X			
24"	X				

 **WARNING**

The test pressures listed by valve class represent machine capability and may not apply to your valve to be tested. Actual valve test pressures may be lower than the pressures listed in Table 2-2 due to the valve material, intended operating temperature, and potential other factors. Refer to the valve manufacturer’s specifications for the correct testing pressure. Failure to do this could result in property damage or personnel injury.

## 2.5 ITEMS REQUIRED BUT NOT SUPPLIED

The following items are required but not supplied in your CLIMAX product kit:

- Hydraulic oil AW-32
- General purpose air tool oil
- Shop air at 100–150 psi and 40 scfm (6.9–10.3 bar at 1.13 m<sup>3</sup>/min)
- Anchor bolts/hardware

---

This page intentionally left blank

# 3 SETUP

## IN THIS CHAPTER:

3.1 RECEIPT AND INSPECTION	-15
3.2 SECURING THE TEST STAND	-15
3.2.1 CEMENT IN PLACE (OPTION 1 – RECOMMENDED)	-16
3.2.2 DRILL AND ANCHOR (OPTION 2)	-16
3.3 FILLING THE LUBRICATOR AND HYDRAULIC TANK	-16
3.4 CONNECTING TO THE TEST PRESSURE SOURCE	-17
3.5 CONNECTING THE UTILITIES	-18
3.6 CONFIGURING THE SEAL PLATES	-18

This section describes the setup and assembly procedures for the USV-24-300T Hydro Pro Universal Straight Body Valve Tester.

## 3.1 RECEIPT AND INSPECTION

Your CLIMAX product was inspected and tested prior to shipment, and packaged for normal shipment conditions. CLIMAX does not guarantee the condition of your machine upon delivery.

When you receive your CLIMAX product, perform the following receipt checks:

1. Inspect the shipping containers for damage.
2. Check the contents of the shipping containers against the included invoice to make sure that all components have been shipped.
3. Inspect all components for damage, lifting the USV-24-300T with a forklift using the fork points in the base frame.

Contact CLIMAX immediately to report damaged or missing components.

### NOTICE

Keep the shipping container and all packing materials for future storage and shipping of the machine.

## 3.2 SECURING THE TEST STAND

The USV-24-300T must be anchor-bolted through the base frame to the floor before operation.

### NOTICE

Do not operate the machine unless it has been anchored to the floor. The floor must be level within  $\pm 5^\circ$ .

---

## **WARNING**

All units must be stabilized for operator safety. The operator must determine what is necessary to provide a safe environment.

### 3.2.1 Cement in place (option 1 – recommended)

Cement the anchor bolts into the floor. The exposed threads of the anchor must protrude a minimum of two threads past the nut and washer. See Figure 3-1.

### 3.2.2 Drill and anchor (option 2)

Drill holes into the floor for an expanding type anchor sleeve. A .5" (12.7 mm) lag bolt will require a minimum of 1.5" (38.1 mm) thread engagement. See Figure 3-1.

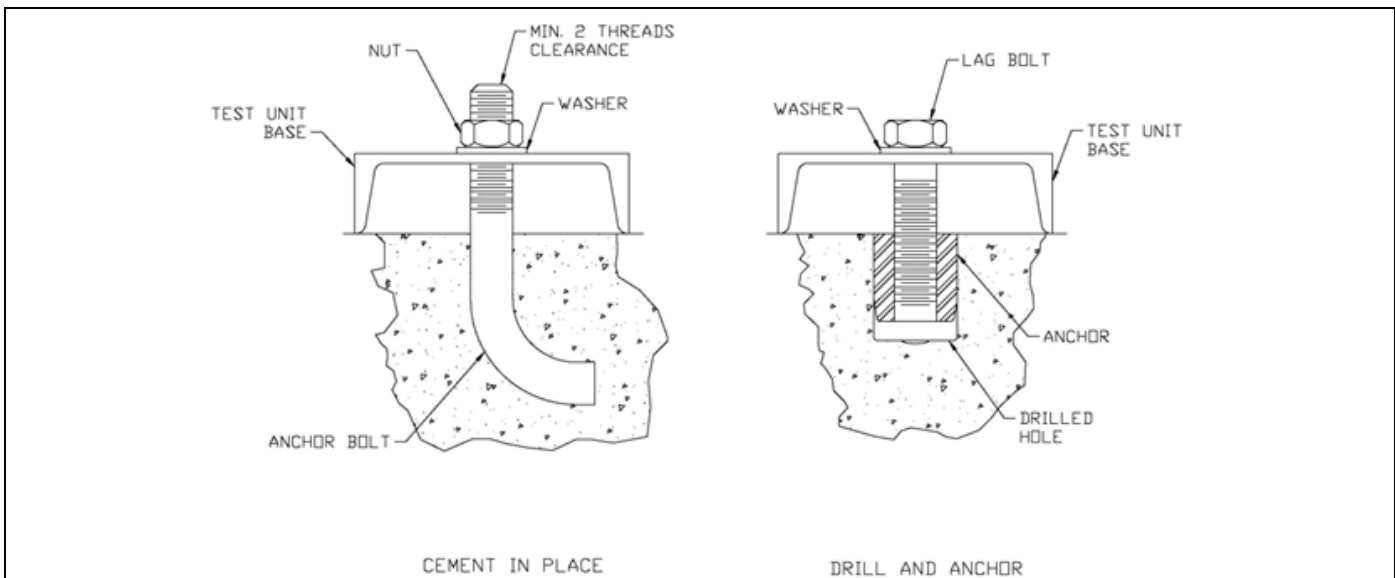


FIGURE 3-1. SECURING THE TEST STAND

---

## 3.3 FILLING THE LUBRICATOR AND HYDRAULIC TANK

Do the following to fill the lubricator and hydraulic tank:

1. Check that the lubricator is filled with general purpose air tool oil.
2. Retract the hydraulic cylinders and fill the hydraulic tank with AW-32 hydraulic oil to the top of the sight gauge.

## **NOTICE**

If the hydraulic cylinders are not retracted when filled, the hydraulic tank might later overflow when the hydraulic cylinders are retracted.

**NOTICE**

The fill level must be visible in the sight tube throughout all modes of operation.

## 3.4 CONNECTING TO THE TEST PRESSURE SOURCE

The USV-24-300T can be paired with a variety of hydrostatic and low-pressure air pressure sources as long as the hydrostatic and air pressures are within the limits specified in Section 2.4 on page 12.

Typical Calder testing systems include a clamp fixture, such as this Hydro Pro Universal Straight Body Valve Tester, and a test pressure source and control console, such as a Hydro Pro Console. Refer to the operating manual for the Hydro Pro Console (or other pressure source) for setup instructions for that module.

**CAUTION**

Always use test pressure hoses rated to the full system working pressure. Failure to do this could result in property damage or personnel injury.

Do the following to assemble the machine:

1. Connect the 1/2" (13 mm)-ID high-pressure inlet hose to the pressure source's primary outlet (that is, the side through which the valve is filled). This is the connection to the lower seal plate when the clamp fixture is tilted up.

**NOTICE**

If the pressure source has quick fill ability, connect the outlet line from the test pressure source with quick-fill ability to the 1/2" (13 mm)-ID high-pressure inlet hose.

2. Connect the 1/4" (6 mm)-ID high-pressure inlet hose to the pressure source's second pressure outlet. This is the connection to the top plate (when tilted up).

**NOTICE**

If the pressure source has only one pressure outlet, this hose may be capped or removed and the port plugged.

---

## 3.5 CONNECTING THE UTILITIES

Connect shop air to the 1/2" NPT SHOP AIR INLET port. Shop air pressure is 100–150 psi (6.9–10.3 bar). The required shop air volume is 40 scfm (1.13 m<sup>3</sup>/min).

Connect a drain hose with a 1/2" (13 mm) minimum inside diameter and rated to the system maximum pressure or higher to the DRAIN OUTLET port. Route the hose to a safe location. The drain line may be connected to the return port of a recirculation system if the recirculation system does not obstruct the drain line's flow.

### **CAUTION**

Secure the hose end to prevent hose whip when high-velocity fluid travels through the drain hose. Hose whip could result in property damage or personnel injury.

### **WARNING**

Do not block the DRAIN OUTLET port. High-pressure fluid vented to the drain must be able to flow freely. Blocking the drain could rupture the drain line or fittings prevent the safety interlock from functioning and may result in property damage or personnel injury.

---

## 3.6 CONFIGURING THE SEAL PLATES

Machines equipped with the optional easy-out seal plate holders may be configured with different seal plates (such as RTJ seal plates and bore seal adapter plates) before operation.

To remove the seal plates from the easy-out holder, do the following:

1. Check that the clamp box is in the horizontal position (if the machine is equipped with optional tilt)
2. Thread a lifting eye into the seal plate and lift it out of the easy-out holder using a hoist.

To install the seal plates, reverse the removal steps above. Check the condition of the small o-ring at the center of the easy-out holders before installing the seal plates.

# 4 OPERATION

**IN THIS CHAPTER:**

4.1 PRE-OPERATION CHECKS	-19
4.2 CLAMPING A VALVE	-20
4.3 TILTING A VALVE	-23
4.4 PRE-TESTING	-24
4.5 TESTING	-24
4.6 POST-TESTING	-25
4.7 UNCLAMPING A VALVE	-25

## 4.1 PRE-OPERATION CHECKS

Do the following checks before operating the machine:

1. Complete the risk assessment checklist in Table 1-2 on page 5.
2. Check that the work area is clear of non-essential personnel and equipment.
3. Check all hand tools are removed from inside the machine and the area.
4. Check that the o-ring seals in the seal plates are in good condition (free of nicks, tears, and not brittle).
5. Check that the seal plates are in good condition.

 **CAUTION**

Damage (such as dents and dings) to the seal plates, especially next to the o-ring seals, could cause the valve under test to fail to form a seal against the plates.

6. Check that the air lubricator has adequate volume of air tool oil.
7. Check that the hydraulic tank has adequate volume of hydraulic oil.
8. Check that the machine has adequate shop air pressure and volume.
9. Check that the L.P. AIR SUPPLY and H.P. AIR SUPPLY valves are closed.
10. Turn on the AIR SUPPLY valve.
11. Check that the appropriate protective barriers are in place.

 **WARNING**

High-pressure valve testing may result in the sudden, unexpected release of stored energy with the potential to cause property damage or personnel injury. Potential hazards may include the possibility of high-velocity fluid escaping and high-energy projectile impact. The end-user must assess the application and install protective barrier devices, as appropriate.

---

## 4.2 CLAMPING A VALVE

### **WARNING**

Before clamping the valve to be tested, check that the valve is rated to the pressure for which it will be tested. Check the valve manufacturer's specifications for the correct test pressure. If the valve is not rated to the test pressure that will be applied, the valve or the machine may be damaged and could result in personnel injury.

### **WARNING**

This machine applies a clamping load across the body of the valve under test. Before clamping the valve to be tested, check that clamping across the valve body is a suitable method to clamp the valve during test, and that it can withstand the clamping force that is required. If the valve cannot withstand the clamping force, this could result in property damage and personnel injury.

Do the following to clamp a valve:

1. Check that the clamp box is tilted down to the horizontal position (if equipped with the tilt option). If the clamp box needs to be repositioned, refer to Section 4.3 on page 23.
2. Open the L.P. PUMP AIR SUPPLY valve, then position the ram using the RAM RAPID control so that the seal plates have an opening large enough for the valve under test to fit between them.

### **TIP:**

The ram may also be advanced by opening the H.P. PUMP AIR SUPPLY valve and increasing pressure using the CLAMP PRESSURE CONTROL regulator. Note that the ram can only be retracted with the CLAMP INTERLOCK in the RELEASE position, which requires the SIDE 1 and SIDE 2 interlock DRAINS to be opened first.

3. Lower the valve under test (typically with an overhead hoist) into the clamp box and position it with its flanges centered on the seal plates.



 **WARNING**

Use chains or straps to lower the valve under test into the clamp box. Do not place hands or any other body part between the seal plates or between the valve and the seal plates, as this could result in bodily injury.

4. Advance the ram using the RAM RAPID control until the seal plates contact and clamp against the valve flanges. At this point the valve is clamped with low pressure only. Continue supporting the weight of the valve with the hoist until full clamp pressure has been applied.

 **CAUTION**

Do not remove the lifting device from the test valve until the test valve is fully clamped. Failure to follow this guideline could result in the test valve falling, causing personnel injury or property damage.

 **WARNING**

Do not crawl under or place any body part underneath the test valve. If the test valve falls, it could result in bodily injury.

**NOTICE**

When clamping small valves, use RAM RAPID to move the seal plates close to the flanges, then use CLAMP PRESSURE CONTROL to advance the ram and clamp it to the required clamp pressure as described in the following two steps.

5. Determine the clamp pressure required by using the clamping pressure chart located on the control panel (shown in Table 4-1 on page 22) and by following these steps:
  - a) Select the correct valve size in the first column.
  - b) Select the correct valve class and test pressure from the header rows.
  - c) Determine the hydraulic clamping pressure at the intersection of the selected row and column.

Example (see highlighted cells): using a 16" class 600 valve at 2,250 psi test pressure = 8,900 psi clamp pressure.

**TABLE 4-1. USV-24-300T CLAMPING PRESSURE**

Valve size (inches)	O-ring size	ASME class				
		150	300	600	900	1,500
		Maximum test pressure, psi (bar) <sup>a</sup>				
		450 (31)	1,125 (78)	2,250 (155)	3,375 (233)	5,625 (388)
Hydraulic pressure required to seal, psi (bar)						
8"	2-372	600 (41)	1,400 (97)	2,800 (193)	4,200 (290)	7,000 (483)
10"	2-379	900 (62)	2,200 (152)	4,400 (304)	6,500 (449)	
12"	2-382	1,200 (83)	3,000 (207)	6,000 (414)	9,000 (621)	
14"	2-383	1,400 (97)	3,500 (242)	6,900 (476)		
16"	2-385	1,800 (125)	4,500 (311)	8,900 (614)		
18"	2-466	2,400 (165)	6,000 (414)			
20"	2-470	3,100 (214)	7,700 (531)			
24"	2-474	4,300 (297)				

a. The operator is responsible to select the actual test pressure that is required for the valve under test.

 **CAUTION**

The test pressures listed by valve class represent machine capability and may not apply to your valve to be tested. Actual valve test pressures may be lower due to the valve material, intended operating temperature, and potential other factors.

Refer to the valve manufacturer's specifications for the correct testing pressure. Failure to do this could result in property damage or personnel injury.

- Open the H.P. PUMP AIR SUPPLY valve and increase the CLAMP PRESSURE CONTROL until the clamp pressure gauge reads the required clamp pressure.


**WARNING**

During testing, leave the H.P. PUMP AIR SUPPLY valve open and the CLAMP PRESSURE CONTROL at the clamp pressure setting. This allows the pump to compensate for small amounts of leakage in the case that the hydraulic system begins to slowly leak.

Failure to do this could result in a valve becoming unclamped during testing and could cause property damage or personnel injury.

**NOTICE**

If the H.P. PUMP cycles after the clamp pressure has been set, it may indicate that the hydraulic system has a leak. Perform a hydraulic leakage check (see Section 5 on page 27) and correct any hydraulic leaks.

---

## 4.3 TILTING A VALVE


**CAUTION**

Seal plates with machines equipped with easy-out holders are held in by gravity, and so they may fall if the clamp box is tilted upright without a valve clamped in the clamp box.

If the machine has easy-out holders, do not tilt the clamp box upright without a valve clamped between the seal plates, as this could result in property damage or personnel injury.

Do the following to tilt a valve:

1. Check that the valve under test is clamped securely to the required clamp pressure.
2. Disconnect the valve under test from the overhead hoist.
3. Check that all personnel are clear of the clamp box and the valve under test, then open the L.P. PUMP AIR SUPPLY valve and use the TILT lever to tilt the valve up or down.
4. Turn off the L.P. PUMP AIR SUPPLY valve after tilting the valve into position.

---

## 4.4 PRE-TESTING

### CAUTION

Prior to performing a hydrostatic test, check that all air has been vented from the valve under test. Failure to do this could result in property damage or personnel injury.

Do the following for pre-testing:

1. Check that the valve under test is clamped to the correct clamp pressure.

### NOTICE

If testing with water and the machine has the tilt option, check that the valve under test is tilted into the upright position. This allows the valve under test to be filled from the bottom up while air is vented out the top.

If the tilt option has not been purchased or if pressurizing with a single line, the valve under test must be vented while filling using an alternate means. This will vary based on valve design.

2. Close the SIDE 1 and SIDE 2 DRAIN valves at the clamp fixture control panel.
3. Fill the valve under test with water by using the Hydro Pro Console test pressure controls (or alternate test pressure source) to fill through the 1/2" (13 mm) line and to vent the air from the valve under test by opening the 1/4" (6 mm) line to drain. Refer to the manual of the Hydro Pro Console (or alternate test pressure source) for specific filling instructions.

---

## 4.5 TESTING

This machine is designed to perform high-pressure hydrostatic and low-pressure air tests. Refer to Section 2.4 on page 12 for maximum pressures.

### WARNING

Do not use this machine for high-pressure gas testing, which could result in property damage or personnel injury.

Do the following to complete a valve test:

1. Check that the H.P. PUMP AIR SUPPLY valve is open and that the CLAMP PRESSURE CONTROL is set for the correct clamp pressure.

2. Close the SIDE 1 and SIDE 2 DRAIN valves at the clamp fixture controls, if not already closed.
3. Pressurize the valve under test per the instructions provided with the test pressure source.

 **WARNING**

Do not pressurize the machine above the maximum pressure rating. Refer to Section 2.4 on page 12. Pressurizing the machine above the maximum pressure rating could result in property damage or personnel injury.

 **WARNING**

Do not attempt to release the clamp pressure while the valve under test is pressurized. Releasing a valve under pressure could result in property damage or personnel injury.

---

## 4.6 POST-TESTING

Do the following after completing a test:

1. Shut off the test pressure source.
2. Drain the test pressure from the valve under test using the controls at the test pressure source.
3. Drain the water from the valve using low-pressure air, if the test pressure source has this feature.
4. If the clamp fixture has the tilt option, tilt the clamp box and the valve under test to the horizontal position.

---

## 4.7 UNCLAMPING A VALVE

 **WARNING**

Do not release the clamp pressure while the valve under test is pressurized. Releasing a valve under pressure could result in property damage or personnel injury.

Do the following to unclamp a valve:

1. Support the valve under test with an overhead hoist.

---

 **CAUTION**

Do not release the clamp unless supporting the valve with a hoist or other suitable device. Releasing an unsupported valve could result in property damage or personnel injury.

2. Back off the CLAMP PRESSURE CONTROL to zero.
3. Close the H.P. PUMP AIR SUPPLY valve.
4. Turn the SIDE 1 and SIDE 2 interlock DRAIN valves to OPEN, and then turn the CLAMP INTERLOCK to RELEASE.
5. Open the L.P. PUMP AIR SUPPLY valve and RETRACT the ram using the RAM RAPID controls.
6. Close the L.P. PUMP AIR SUPPLY valve.
7. Lift the valve under test out of the clamp box.

# 5 MAINTENANCE

## 5.1 MAINTENANCE CHECKLIST

Table 5-1 lists maintenance intervals and tasks.

**TABLE 5-1. MAINTENANCE INTERVALS AND TASKS**

Interval	Task
Before each use	Check air lubricator level and refill with general purpose air tool oil as necessary.
	Check hydraulic oil level and refill with AW-32 as necessary.
	Check seal plate O-rings/sealing surface condition.
Periodically	Check the condition of the hoses and replace as necessary.
	Replace the air inlet filter with Air Prep Unit Filter (P/N 87437) as necessary.
	Check for hydraulic leakage (see Section 5.2).
	Grease the pillow block bearings when equipped with the tilt option.

## 5.2 CHECKING FOR HYDRAULIC LEAKAGE

The hydraulic system must be maintained in a leak-free condition to assure consistent and reliable clamping throughout the test.

Perform the following check periodically or if the hydraulic system is ever suspected of leaking.

### **CAUTION**

Do not apply test pressure at any time during this check, as that may result in property damage or personnel injury.

Do the following to check for hydraulic leakage:

1. If equipped with the tilt option, place the clamp box in the horizontal position.
2. Select a valve or similar component that can be clamped with more than 5,000 psi (345 bar) of clamping pressure.
3. Clamp the valve in the clamp box to a minimum of 5,000 psi (345 bar), but not more than the test piece can handle.

- 
4. Keep the test piece supported with an overhead hoist, and shut off the H.P. PUMP AIR SUPPLY valve and reduce the CLAMP PRESSURE CONTROL regulator to zero. This will allow the system to leak down if a leak is present without the pump replenishing pressure.
  5. Monitor the clamp pressure for a minimum of 10 minutes. Pressure loss must not be more than 100 psi (6.9 bar) in 10 minutes.



## **6 STORAGE AND SHIPPING**

---

### **6.1 STORAGE**

Proper storage of the Hydro Pro Universal Straight Body Valve Tester will extend its usefulness and prevent undue damage.

Before storing, do the following:

1. Retract the hydraulic cylinders.
2. Drain all water from the lines and dry the machine surfaces.
3. Drain the hydraulic fluid from the tank and lines.
4. Drain the air lubricator.

---

### **6.2 DECOMMISSIONING**

To decommission the Hydro Pro Universal Straight Body Valve Tester prior to disposal, drain all fluids from the system. Refer to Appendix A for component assembly information.


---

This page intentionally left blank

# APPENDIX A ASSEMBLY DRAWINGS

## Drawing list

FIGURE A-1. USV-24-300T CLAMP FIXTURE ASSEMBLY (P/N 88574)	- - - - -32
FIGURE A-2. CONTROL CONSOLE USV ASSEMBLY FRONT (P/N 89020)	- - - - -33
FIGURE A-3. CONTROL CONSOLE USV ASSEMBLY BACK (P/N 89020)	- - - - -34
FIGURE A-4. CONTROL CONSOLE USV ASSEMBLY PARTS LIST 1 (P/N 89020)	- - - - -35
FIGURE A-5. CONTROL CONSOLE USV ASSEMBLY PARTS LIST 2 (P/N 89020)	- - - - -36
FIGURE A-6. USV-24-300T ASSEMBLY 1 (P/N 89889)	- - - - -37
FIGURE A-7. USV-24-300T ASSEMBLY 2 (P/N 89889)	- - - - -38
FIGURE A-8. USV-24-300T ASSEMBLY PARTS LIST 1 (P/N 89889)	- - - - -40
FIGURE A-9. USV-24-300T ASSEMBLY PARTS LIST 2 (P/N 89889)	- - - - -41
FIGURE A-10. TILT MODEL KIT ASSEMBLY (P/N 90056)	- - - - -42
FIGURE A-11. TILT MODEL KIT PARTS LIST (P/N 90056)	- - - - -43
FIGURE A-12. EASY OUT HOLDER ASSEMBLY (P/N 89975)	- - - - -44
FIGURE A-13. FIXED SEAL PLATES KIT ASSEMBLY (P/N 90104)	- - - - -45
FIGURE A-14. SEAL PLATES EASY-OUT O-RING KIT (P/N 88671)	- - - - -46
TABLE A-1. KIT – NON-TILT (P/N 88276)	- - - - -47
TABLE A-2. SPARE PARTS LIST	- - - - -47

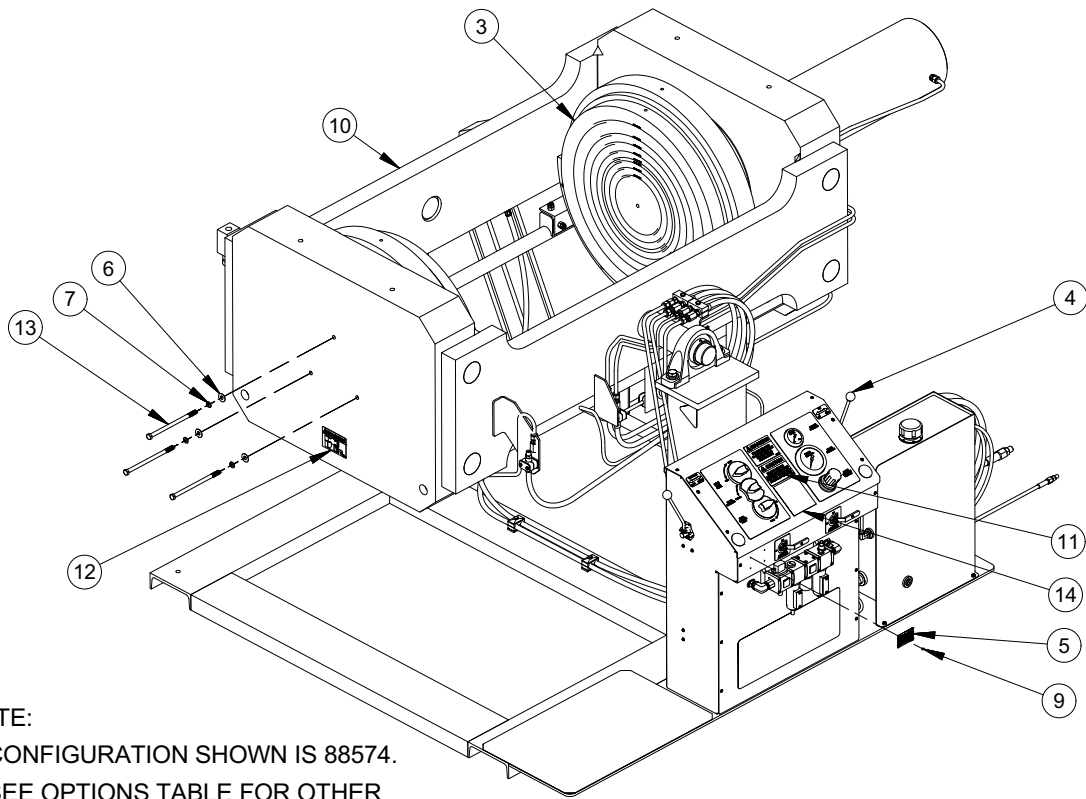

NOTE:

1. CONFIGURATION SHOWN IS 88574.  
SEE OPTIONS TABLE FOR OTHER  
CONFIGURATIONS.

OPTIONS TABLE

P/N	OPTIONS	QTY IN TOP LEVEL P/N			
		88574	88578	88593	88586
90104	KIT - FIXED SEAL PLATES	0	1	0	1
89975	KIT - EASY OUT HOLDERS WITH SEAL PLATES	1	0	1	0
90056	KIT - TILT	1	1	0	0
90105	KIT - NON-TILT	0	0	1	1

PARTS LIST

ITEM	QTY	P/N:	DESCRIPTION
1	CHART	90104	(NOT SHOWN) KIT - FIXED SEAL PLATES USV-24-300T
2	CHART	90105	(NOT SHOWN) KIT - NON TILT MODEL USV-24-300T
3	1	89975	KIT - EASY OUT HOLDERS WITH SEAL PLATES USV-24-300T
4	1	90056	KIT - TILT USV-24-300T
5	1	29154	PLATE SERIAL YEAR MODEL CE 2.0 X 3.0
6	3	78415	WASHER 1/2 FLTW SS
7	3	78665	WASHER 1/2 LOCW SS
8	4	85437	LABEL WARNING - HAND CRUSH/FORCE FROM BELOW 3.80 X 3.29
9	4	87775	RIVET BLIND 1/8 DIA SS 316
10	1	89889	BASE ASSEMBLY USV-24-300T
11	1	89122	LABEL CAUTION - DO NOT REMOVE LIFTING DEVICE 4-5/8 X 3-1/4
12	1	89123	LABEL CAUTION - DO NOT CRAWL UNDER 4-5/8 X 3-1/4
13	3	90101	SCREW 1/2-13 X 9 HHCS 18-8 SS
14	1	90106	LABEL CLAMPING CHART USV-24-300T
15	1	90102	(NOT SHOWN) CRATE HYDRO USV-24
16	1	90103	(NOT SHOWN) MANUAL INSTRUCTION USV-24-300T

FIGURE A-1. USV-24-300T CLAMP FIXTURE ASSEMBLY (P/N 88574)

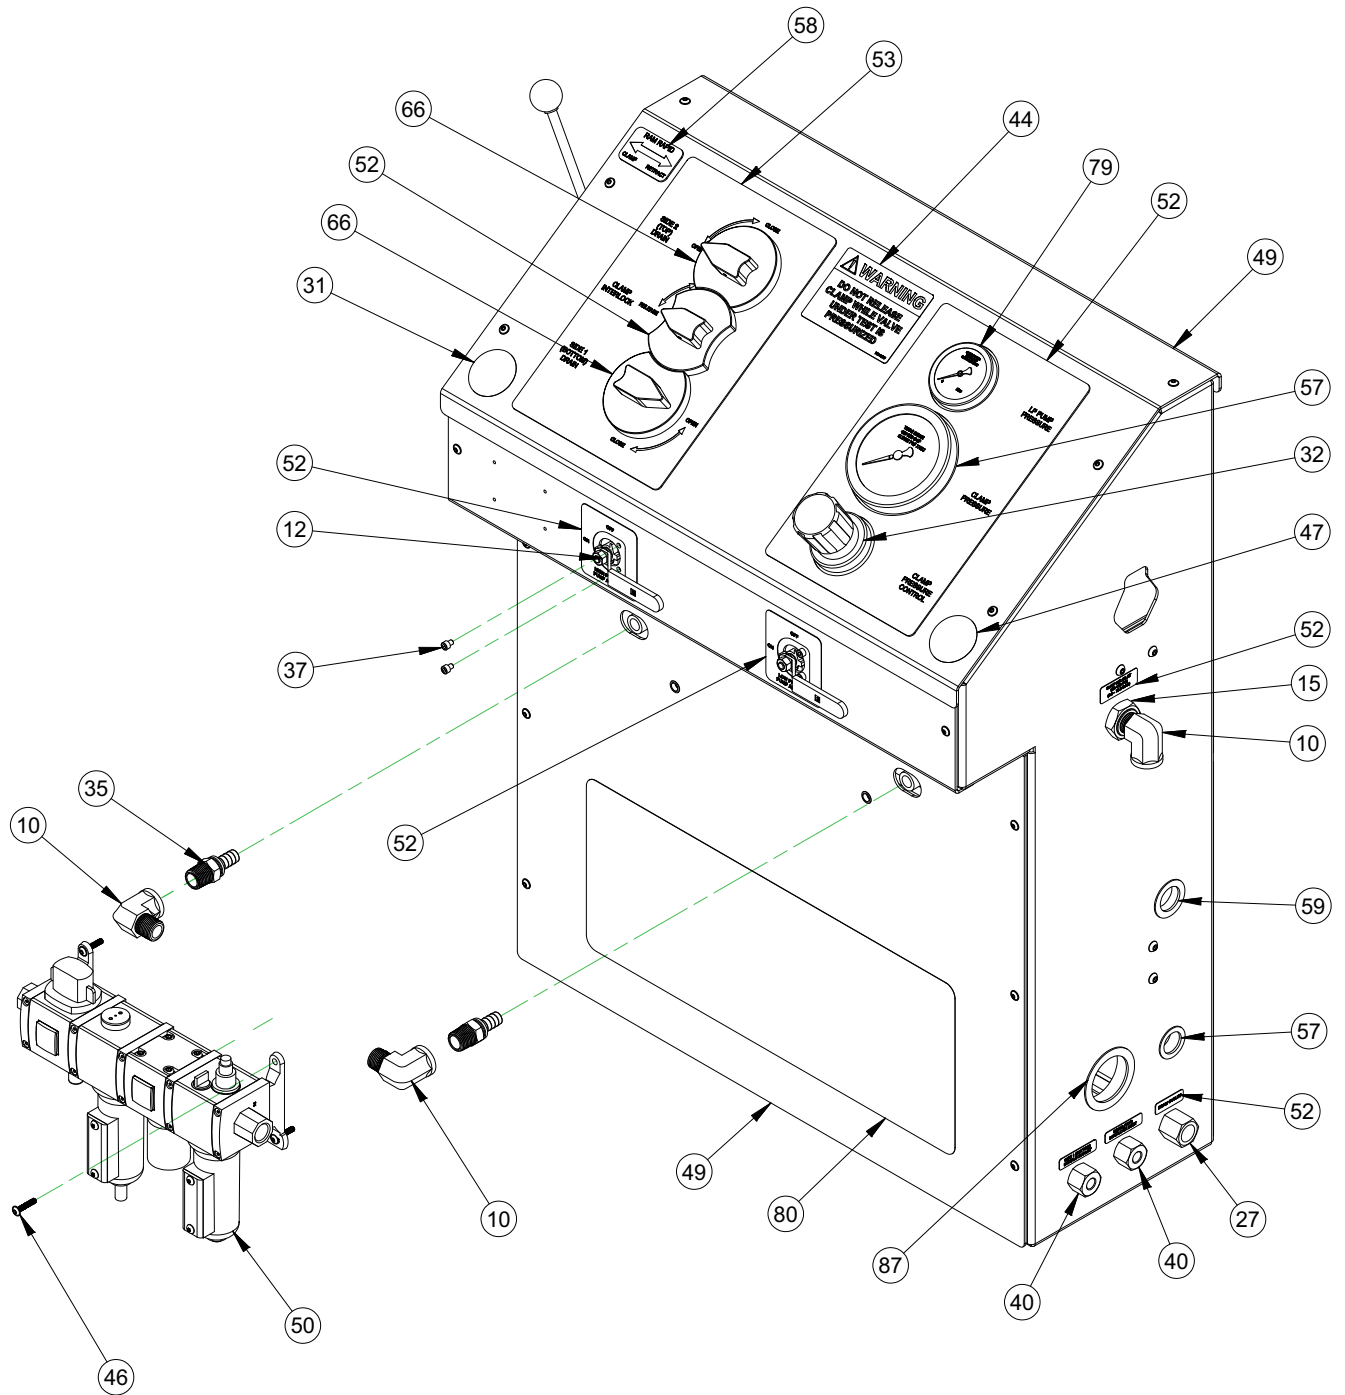


FIGURE A-2. CONTROL CONSOLE USV ASSEMBLY FRONT (P/N 89020)

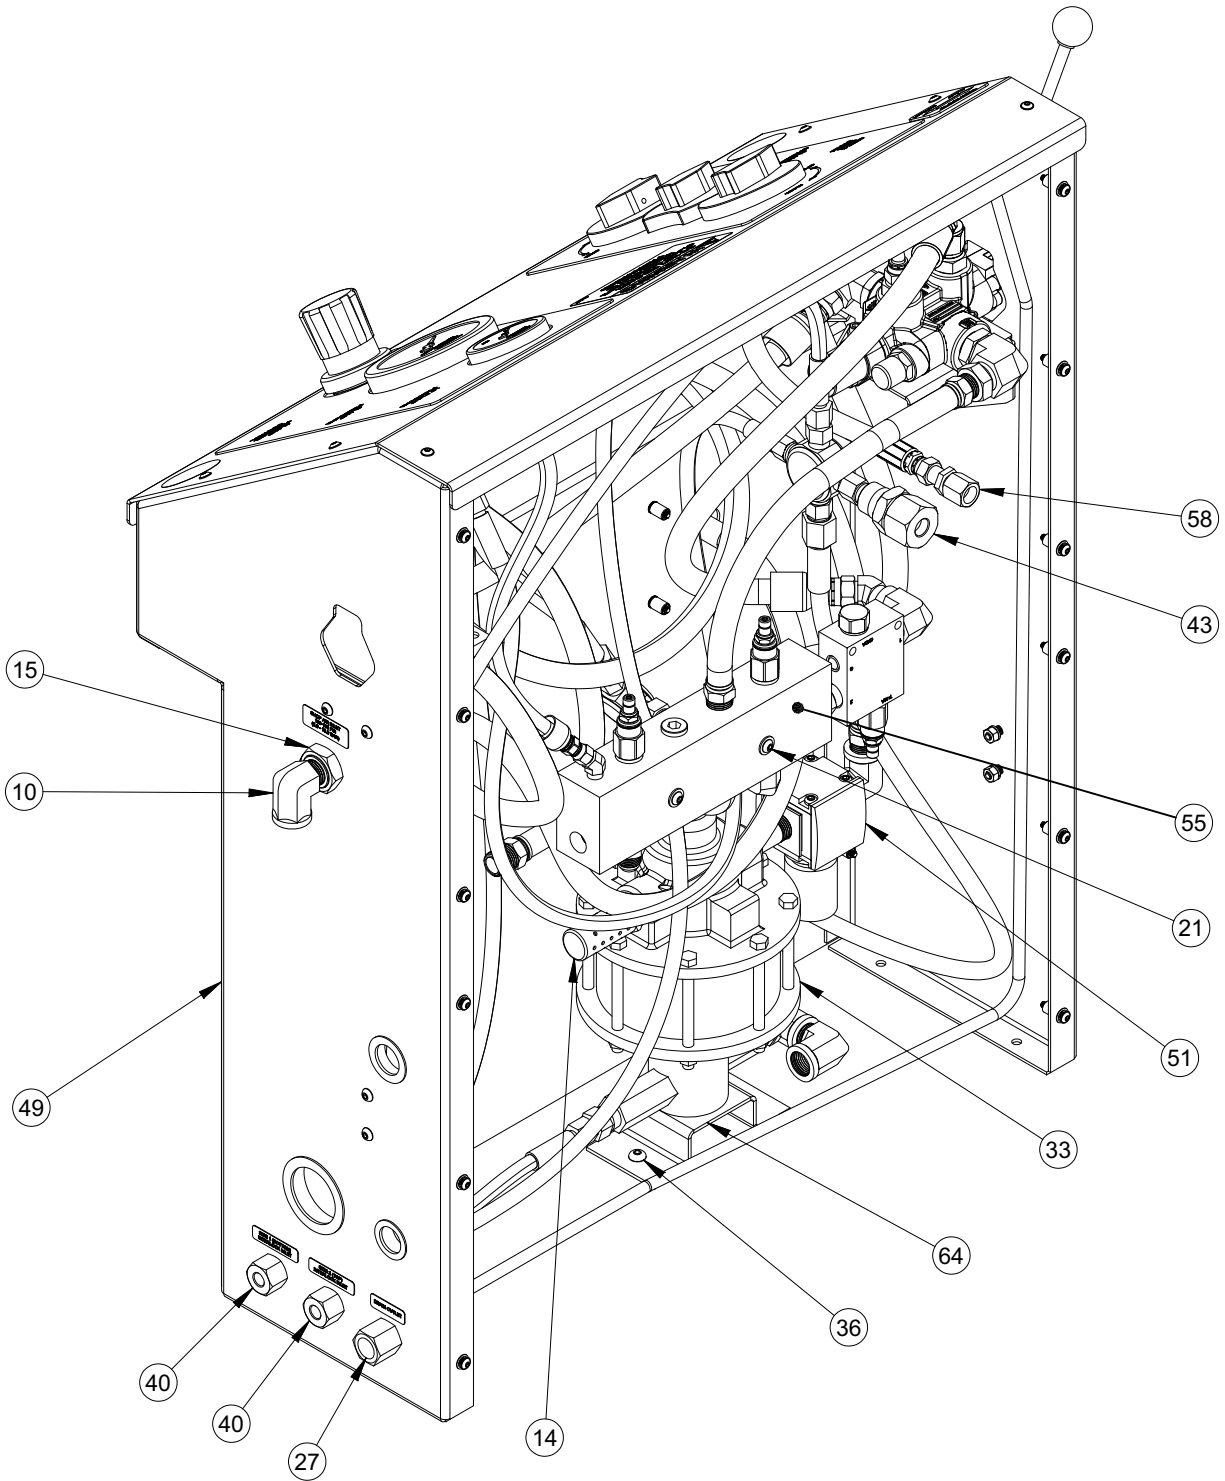


FIGURE A-3. CONTROL CONSOLE USV ASSEMBLY BACK (P/N 89020)

ITEM	QTY	P/N:	DESCRIPTION	SCHEMATIC ID
1	1	12579	FTG PLUG 1/2 NPTM SOCKET	
2	1	12876	FTG REDUCER BUSHING 3/4 NPTM X 1/2 NPTF	
3	2	12974	FTG ELBOW 1/2 NPTM X JIC-8 MALE 90 DEG	
4	1	13211	FTG ELBOW 1/2 NPTM X 1/2 NPTF STREET 90 DEG	
5	1	13253	FTG ADAPTER 1/2 NPTM X #8 JICM	
6	1	13828	FTG ELBOW 1/2 NPTM X 1/2 NPTM 90°	
7	1	14704	FTG NIPPLE 1/2 NPTM X 1/2 NPTM	
8	1	16047	FTG ADAPTER SAE-10M X JIC-8M STRAIGHT	
9	2	33991	PLUG HEX 3/4 NPT BRASS	
10	11	35692	FTG ELBOW 1/2 NPTM X 1/2 NPTF ST 90 DEG BRASS	
11	1	55054	FTG ADAPTER SAE-10 MALE X JIC-6 MALE	
12	2	77389	BALL VALVE 1/2 NPT FEMALE 160 PSI	V-02, V-03
13	1	77394	REGULATOR AIR 1/2 NPT 125 PSI	PCV-03
14	1	77399	HIGH FLOW MUFFLER 3/4 NPTM COMPACT	
15	1	77421	FTG BULKHEAD 1/2 NPTF BRASS	
16	1	77422	FTG TEE 1/2 NPTM X 1/2 NPTF MALE RUN TEE BRASS	
17	2	77427	FTG BARB 1/2 NPTM X 1/2 HOSE 90 DEG ELBOW	
18	1	77461	FTG TUBE TEE UNION 3/8 TUBE	
19	2	77493	FTG CONNECTOR 1/4 NPTM X 3/8 TUBE SS	
20	2	77544	WASHER 1/4 FLTW SS	
21	2	77557	SCREW 1/4-20 X 1/2 BHCS SS	
22	3	77606	NUT 1/4-20 HEX STAINLESS 316	
23	1	77652	GAUGE PRESSURE 4 DIA 0-10000 PSI 1/4 NPTM LOWER BACK MOUNT	PI-02
24	3	77792	VALVE BALL 2 WAY 1/4 NPTF 10000 PSI	V-05, V-06, V-07
25	1	77871	FTG CHECK VALVE 10 KSI 1/2 NPTF	DV-01
26	1	77879	FTG ELBOW 3/4 NPT STREET 90 DEG	
27	1	77911	FTG BULKHEAD 1/2 NPTF X 3/8 TUBE	
28	1	78143	FTG ELBOW SAE-12M X JIC-8M	
29	3	79131	SCREW 1/4-20 X 1-1/2 SHCS SS	
30	1	80974	FTG ELBOW 45 DEG 1/2 NPT MALE 8 JICM	
31	1	81008	LABEL WEAR HEARING AND EYE PROTECTION 2.0 DIA	
32	1	81787	MOUNT NUT REGULATOR PANEL	
33	1	81792	PUMP AIR DRIVEN 10,000 PSI WATER SERVICE	P-01
34	1	81810	FTG ADAPTER PIPE 9/16 TYPE M X 3/8 NPTM 15000 PSI	
35	12	81917	FTG BARB 1/2 NPTM X 1/2 HOSE SWIVEL BRASS	
36	2	82603	SCREW 5/16-18 X 1/2 BHCS 18-8 SS	
37	4	82641	SCREW 10-24 X 1/4 SHCS SS	
38	144	82847	HOSE LOW PRESSURE PUSH LOK 1/2 ID	
39	1	85072	FTG COUPLING 1/4 NPTF X 1/4 NPTF SS HEAVY WALL 10K PSI	
40	2	85232	FTG BULKHEAD 1/4 NPTF 15000 PSI	
41	1	85259	ADAPTER 9/16 TYPE M X 1/4 MNPT STAINLESS 15 KSI	
42	3	85270	FTG ADAPTER TYPE M12 X 3/8 MNPT 15,000 PSI	
43	1	85407	FTG BULKHEAD 3/8 NPTF X 3/8 NPTF 15000 PSI SS	
44	1	85417	LABEL WARNING - DO NOT RELEASE CLAMP 4-5/8 X 3-1/4	
45	1	85756	FTG PUSH-ON HOSE BARB 3/4 NPTM X 3/4 HOSE 90 DEG	
46	4	87231	SCREW 10-32 X 1 BHSCS FLANGED SS316	
47	1	87593	LABEL WARNING - CONSULT OPERATORS MANUAL 2.0 DIA	
48	1	87608	FTG ADAPTER 9/16 TYPE M X 1/2 NPTM STAINLESS 15 KSI	
49	1	87834	CONSOLE CLAMP FIXTURE USV	
50	1	87836	ASSY AIR PREP UNIT & LUBRICATOR USV	V-01, PCV-01, F-01, L-01
51	1	87838	REGULATOR 1/2 NPTF 7-125 PSIG W/BACKET & PANEL NUT	PCV-02
52	1	87839	KNOB INTERLOCK CLAMP RELEASE VALVE	
53	1	87887	LABEL OVERLAY SET CLAMP FIXTURE MODEL USV	

FIGURE A-4. CONTROL CONSOLE USV ASSEMBLY PARTS LIST 1 (P/N 89020)

PARTS LIST				
ITEM	QTY	P/N:	DESCRIPTION	SCHEMATIC ID
54	2	88016	VALVE RELIEF DIRECT-ACTING T-10A CAVITY	PRV-01, PRV-02
55	1	88017	MANIFOLD CONSOLE CLAMP FIXTURE	
56	1	88033	FTG NIPPLE 1/2 NPTM X 2-1/2 BRASS	
57	1	88046	GROMMET LOCKING NYLON BLACK 15/16 ID X 1-1/4 PANEL HOLE	
58	1	88047	FTG BULKHEAD 3/8 NPTF X 3/8 JICM	
59	1	88051	GROMMET LOCKING NYLON BLACK 1-1/16 ID X 1-1/2 PANEL HOLE	
60	1	88057	FTG HEX NIPPLE 3/8 NPTM X 3/8 NPTM 15000 PSI	
61	1	88058	FTG CROSS 3/8 FEMALE NPT SS 15,000 PSI	
62	1	88059	FTG TEE 3/8 FEMALE NPT SS 15,000 PSI	
63	1	88060	FTG HEX NIPPLE REDUCING 1/2 NPTM X 3/8 NPTM 15000 PSI SS	
64	1	88088	PUMP BRACKET	
65	2	88091	SCREW 3/8-24 X 5/8 HHCS SS 18-8	
66	2	88097	KNOB INTERLOCK TOP PLATE DRAIN VALVE	
67	1	88201	HOSE ASSY .31 ID 3/4 FEM TYPE M X 46.3 IN OAL 15KSI	
68	1	88202	HOSE ASSY .31 ID 1/4 NPTM X 3/4 FEM TYPE M X 20.9 IN OAL 15KSI	
69	1	88203	HOSE ASSY .23 ID 3/8 NPTM X 9/16 FEM TYPE M X 46 IN OAL 17.4KSI (6/2WL)	
70	1	88204	HOSE ASSY .23 ID 9/16 FEM TYPE M X 60 IN OAL 17.4KSI (6/2WL)	
71	1	88205	HOSE ASSY .23 ID 1/4 NPTM SS X 49.1 IN OAL 17.4KSI (6/2WL)	
72	1	88206	HOSE ASSY .23 ID 1/4 NPTM SS X 41.2 IN OAL 17.4KSI (6/2WL)	
73	1	88207	HOSE ASSY 3 KSI 3/8 JIC-6F X 16.1 OAL STRAIGHT END AND AND 90° END	
74	1	88208	FTG ADAPTER 1/4 NPTM X JIC-8 MALE	
75	1	88209	HOSE ASSY 3 KSI 1/2 JIC-8F X 20.8 OAL STRAIGHT END AND AND 90° END	
76	1	88216	TUBE 3/8 DRAIN CONSOLE	
77	1	88217	TUBE 3/8 DRAIN BOTTOM PLATE	
78	1	88218	TUBE 3/8 DRAIN TOP PLATE	
79	1	88249	GAUGE 1000 PSI 2-1/2 INCH 1/4 MNPT C-CLAMP	PI-01
80	1	88808	LABEL CALDER HYDRO PRO TESTER USV 20 X 8	
81	1	89017	VALVE INLINE W/REVERSE FLOW CHECK	DV-02
82	1	89018	VALVE RELIEF DIRECT ACTING 25 GPM	PRV-03
83	1	89063	HOSE ASSY 3 KSI 1/2 JIC-8F X 24.7 OAL STRAIGHT ENDS	
84	1	89101	FTG ADAPTER 45 DEG 1/4 NPT MALE 4 JICM	
85	1	89102	HOSE ASSY 3 KSI 1/2 JIC-8F X 25.5 OAL STRAIGHT END AND AND 90° END	
86	1	89103	HOSE ASSY 3 KSI 1/4 JIC-4F X 1/4 NPTF X 13.6 OAL STRAIGHT ENDS	
87	1	89113	GROMMET LOCKING NYLON BLACK 1-31/32 ID X 2-1/2 PANEL HOLE	
88	1	90479	VALVE HYD CONTROL MANUAL 4-WAY 3 POS SPRING CENTER MOTOR SPOOL SAE PORT	V-04
89	1	90524	FTG ELBOW SAE-12M X 3/4 NPTF STEEL	

FIGURE A-5. CONTROL CONSOLE USV ASSEMBLY PARTS LIST 2 (P/N 89020)



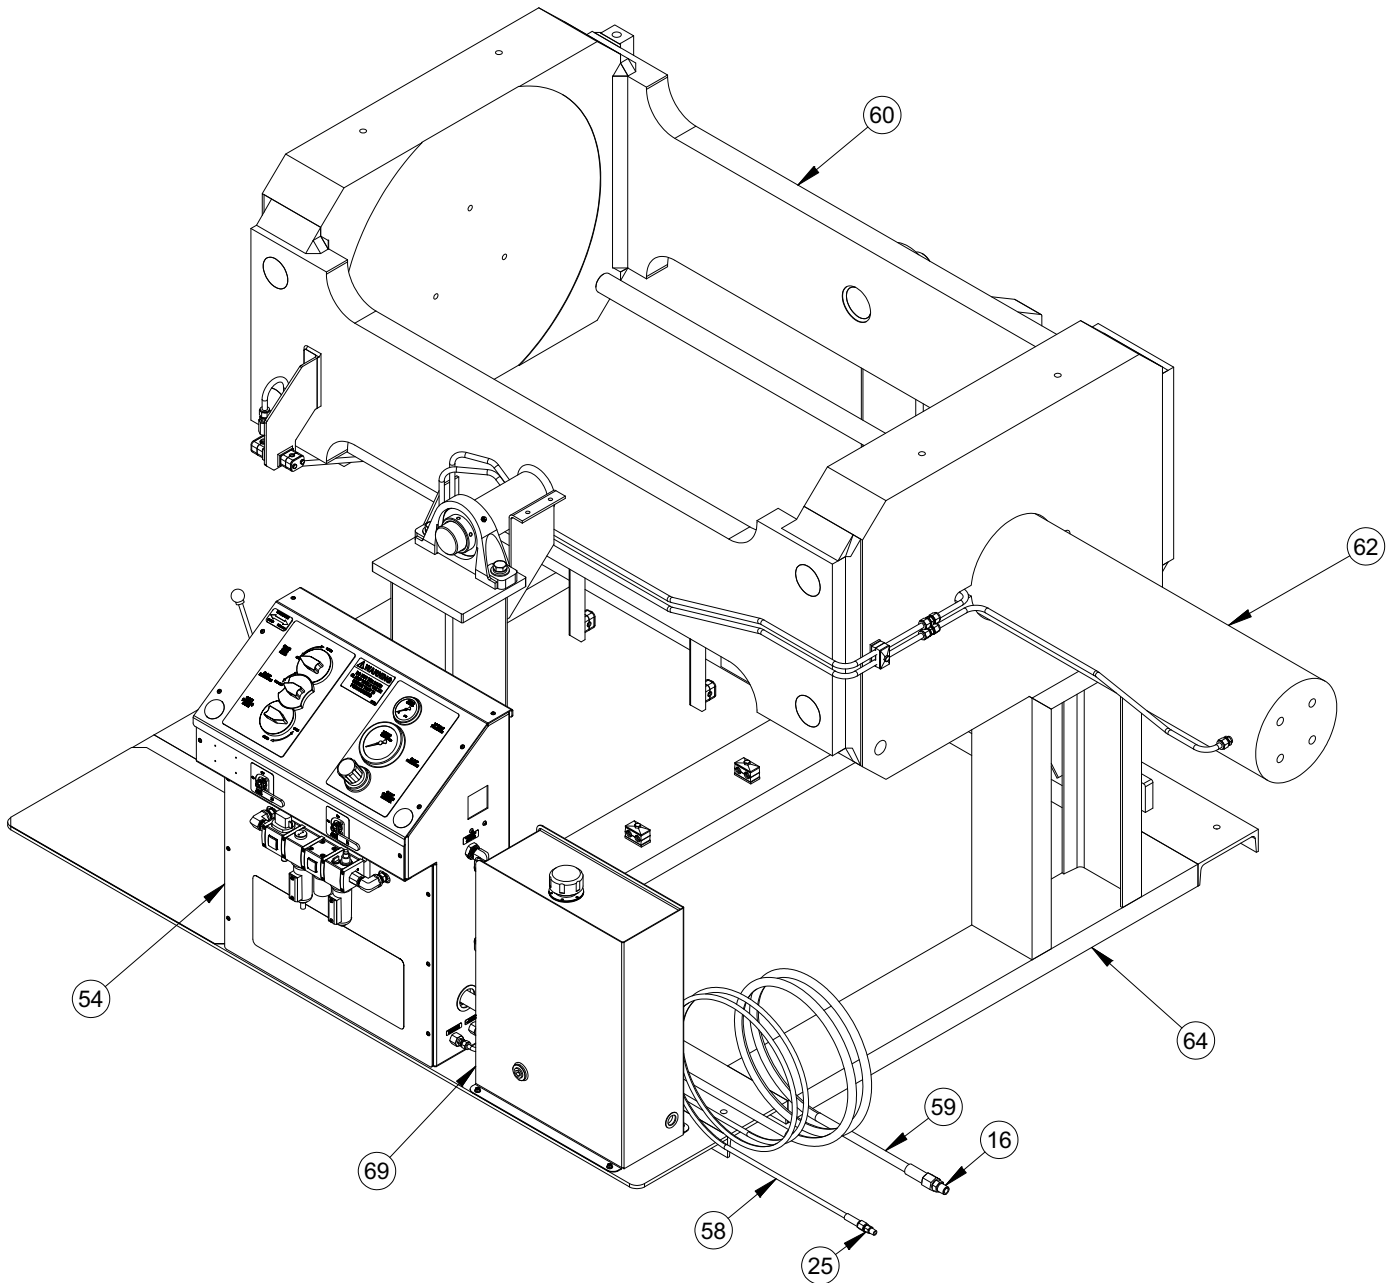


FIGURE A-6. USV-24-300T ASSEMBLY 1 (P/N 89889)


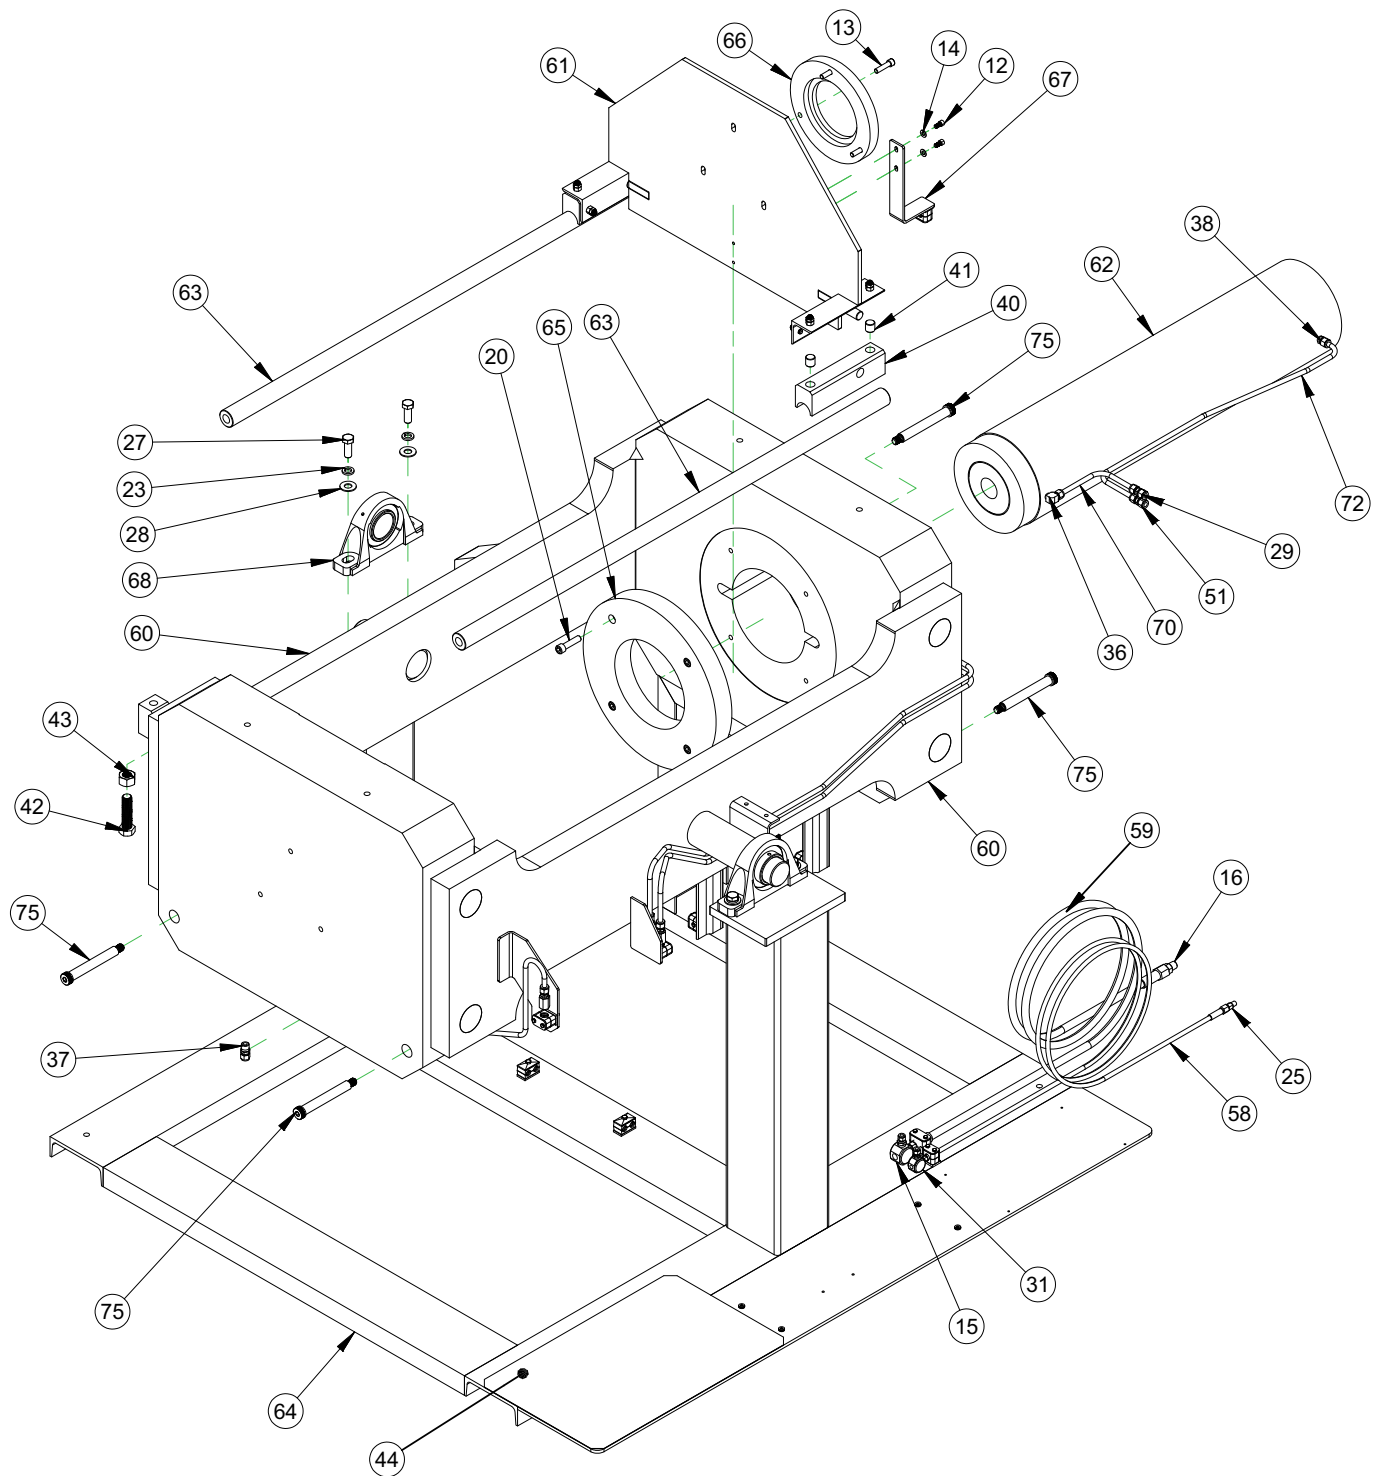


FIGURE A-7. USV-24-300T ASSEMBLY 2 (P/N 89889)

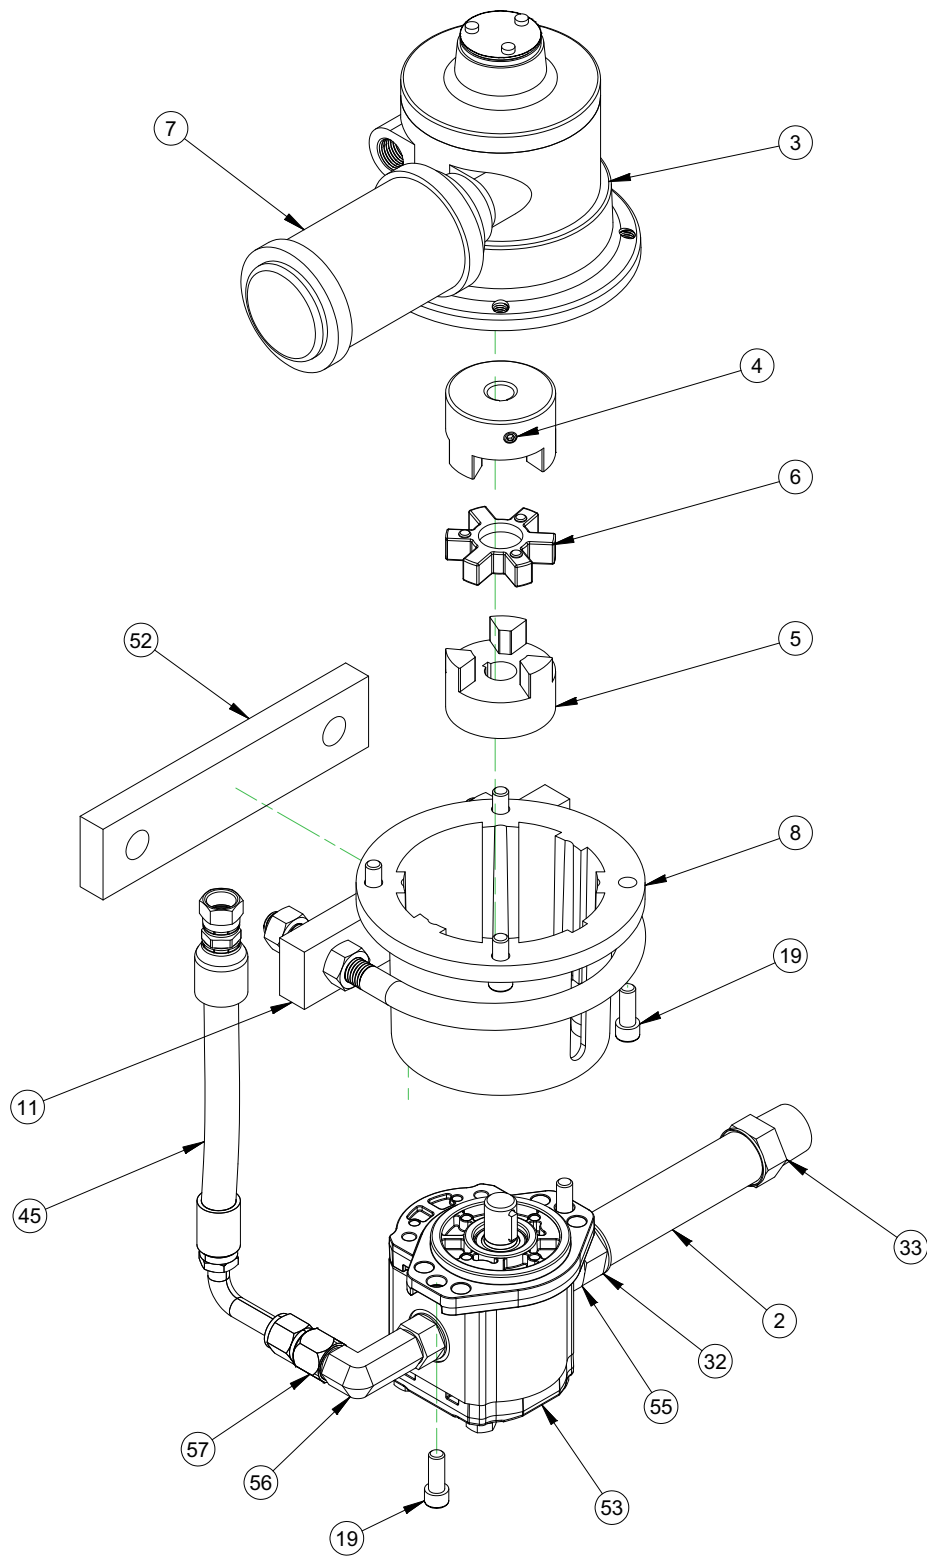

USV-24-300T LP PUMP DETAIL (P/N 89889)

PARTS LIST				
ITEM	QTY	P/N:	DESCRIPTION	SCHEMATIC ID
1	1	33991	PLUG HEX 3/4 NPT BRASS	
2	6 in	55805	HOSE 801 SERIES PUSHLOK 1 INCH ID GRAY	
3	1	77405	MOTOR AIR 1/2 NPTM INLET X 1/2 NPTM OUTLET	M-01
4	1	77406	COUPLING SHAFT 5/8 ID X 2-27/32 FLEXIBLE	
5	1	77407	COUPLING SHAFT 3/4 ID X 2-27/32 FLEXIBLE	
6	1	77408	SPIDER COUPLING SHAFT	
7	1	77409	HIGH FLOW MUFFLER 1/2 NPTM	
8	1	77411	ADAPTER MOTOR TO HYDRAULIC PUMP	
9	2	77459	FTG ELBOW 1/2 NPTM X 3/8 TUBE PRESTOLOK SWIVEL 90 DEG BRASS	
10	16	77544	WASHER 1/4 FLTW SS	
11	1	77561	U-BOLT CLAMPING M16 THREAD FOR 5-13/16 OD 5 PIPE	
12	2	77979	SCREW 3/8-16 X 3/4 SHCS SS	
13	3	78402	SCREW 1/2-13 X 2 SHCS SS 316 FULL THREAD	
14	2	78672	WASHER 3/8 FLTW SS	
15	1	81871	FTG TEE 1/2 FEMALE NPT SS 15,000 PSI	
16	1	81874	FTG MALE ADAPTER SS 15,000 PSI 1-12 TYPE M X 1/2 MNPT	
17	16 in	81894	HOSE LOW PRESSURE PUSH-LOK 3/4 ID	
18	2	81917	FTG BARB 1/2 NPTM X 1/2 HOSE SWIVEL BRASS	
19	6	82668	SCREW 3/8-16 X 1 SHCS SS	
20	4	82683	SCREW 5/8-11 X 2-1/2 SHCS SS	
21	24 in	82847	HOSE LOW PRESSURE PUSH LOK 1/2 ID	
22	4	83105	FTG TUBE CONNECTOR 1/4 NPTM X 3/8 TUBE SUPER DUPLEX	
23	4	83280	WASHER 3/4 LOCW SS	
24	2	83671	FTG CONNECTOR 1/2 NPTM X 3/8 TUBE SUPER DUPLEX	
25	1	85259	ADAPTER 9/16 TYPE M X 1/4 MNPT STAINLESS 15 KSI	
26	10 in	85289	TUBING 3/8 OD X 1/4 ID POLYETHYLENE	
27	4	85901	SCREW 3/4-10 X 2 HHCS STAINLESS	
28	4	85904	WASHER 3/4 FLTW 18-8 STAINLESS	
29	1	87054	FTG UNION 1/2 X 1/2 TUBE STAINLESS	
30	8	87076	SCREW 1/4-20 X 3/4 HHCS FLANGE HEAD GR5	
31	1	87856	FTG TEE 1/4 NPTF 15 KSI	
32	1	88031	FTG PUSH ON HOSE BARB BRASS 1 HOSE X 3/4 MALE NPT	
33	1	88032	FTG PUSH ON HOSE BARB BRASS 1 HOSE X 1 MALE NPT	
34	1	88040	FTG PUSH-ON HOSE BARB 3/4 HOSE X 3/4 MALE NPT SWIVEL BRASS	
35	1	88051	GROMMET LOCKING NYLON BLACK 1-1/16 ID X 1-1/2 PANEL HOLE	
36	1	88085	FTG ELBOW 1/2 SWAGE TUBE X 3/8 MALE NPT SS	
37	1	88115	FTG CONNECTOR MALE 1/2 NPT X 1/2 TUBE SUPER DUPLEX	
38	3	88116	FTG CONNECTOR MALE 3/8 NPT X 1/2 TUBE SUPER DUPLEX	

FIGURE A-8. USV-24-300T ASSEMBLY PARTS LIST 1 (P/N 89889)

PARTS LIST				
ITEM	QTY	P/N:	DESCRIPTION	SCHEMATIC ID
39	1	88185	FTG CONNECTOR FEMALE 1/2 TUBE x 3/8 NPTF	
40	2	88186	TROLLEY BLOCK USV	
41	4	88187	PIN DOWEL 1 DIA X 1 18-8 SS	
42	1	88198	SCREW 1-8 X 4 HHCS GR 5 ZINC PLATED FULLY THREADED	
43	1	88199	NUT 1-8 HEAVY HEX NUT 2H ZINC PLATED	
44	29 in	88200	ABRASIVE ANTISLIP TAPE 18" WIDE	
45	1	88211	HOSE ASSY 3 KSI 1/2 JIC-8F X 11 OAL STRAIGHT END AND AND LONG DROP 90° END	
46	1	88225	FTG COUPLER 1/4 NPTF X 1/4 NPTF 15000 PSI SS	
47	2	88226	FTG COUPLER 3/8 NPTF X 3/8 NPTF 15000 PSI SS	
48	1	88236	TUBE 3/8 SUPER DUPLEX TOP PLATE CLAMP FIXTURE USV	
49	1	88240	TUBE 3/8 SUPER DUPLEX BOTTOM INTERLOCK INLET CLAMP FIXTURE USV	
50	1	88241	TUBE 3/8 SUPER DUPLEX TOP INTERLOCK INLET CLAMP FIXTURE USV	
51	1	88263	FTG UNION 1/2 X 1/2 TUBE SUPER DUPLEX	
52	1	88998	SPACER U-BOLT CLAMP	
53	1	89019	PUMP HYDRAULIC SAE-A 11.9 GPM CLOCKWISE DRIVE	P-02
54	1	89020	CONTROL CONSOLE USV	
55	1	89107	FTG ADAPTER SAE-12M (1-1/16-12) ORB X 3/4 FNPT	
56	1	89108	FTG ELBOW SAE-10M (7/8-14) X JIC-10M (5/8)	
57	1	89109	FTG REDUCER JIC-10F (5/8) X JIC-8M (1/2)	
58	1	89318	HOSE ASSY .23 ID 1/4 NPTM SS X 9/16 FEM TYPE M SS X 240 IN OAL 17.4KSI (6/2WL)	
59	1	89319	HOSE ASSY .50 ID 1/2 NPTM SS X 1-12 FEM TYPE M SS X 240 IN OAL 15KSI (13/2W)	
60	1	89890	WELDMENT CLAMP BOX MODEL USV-24-300T	
61	1	89965	TROLLEY WELDMENT USV 300T	
62	1	89967	RAM HYDRAULIC 300 TON 36 INCH STROKE	C-01
63	2	89968	BAR TROLLEY MODEL USV-12-150T	
64	1	89970	WELDMENT BASE FRAME MODEL USV-12-150T	
65	1	89972	CYLINDER COLLAR MODEL USV-24-300T	
66	1	89973	SWIVEL RING MODEL USV-24-300T	
67	1	89981	TOP PLATE BRACKET USV 300T	
68	2	90039	BRG PILLOW BLOCK 2.9375 DIA	
69	1	90043	RESERVOIR HYDRAULIC USV 300T	
70	1	90070	TUBE 1/2 SS CYLINDER PORT LOWER CLAMP FIXTURE USV	
71	1	90071	TUBE SS 1/2 CLAMP BOX USV	
72	1	90072	TUBE 1/2 SUPER DUPLEX CYLINDER PORT CLAMP FIXTURE USV	
73	1	90073	TUBE 1/2 SUPER DUPLEX CLAMP BOX FIXTURE USV	
74	1	90074	TUBE 1/2 SUPER DUPLEX BOTTOM PLATE CLAMP FIXTURE USV 300T	
75	4	90077	SCREW 1 DIA X 7 X 3/4-10 SHLDCS	

FIGURE A-9. USV-24-300T ASSEMBLY PARTS LIST 2 (P/N 89889)


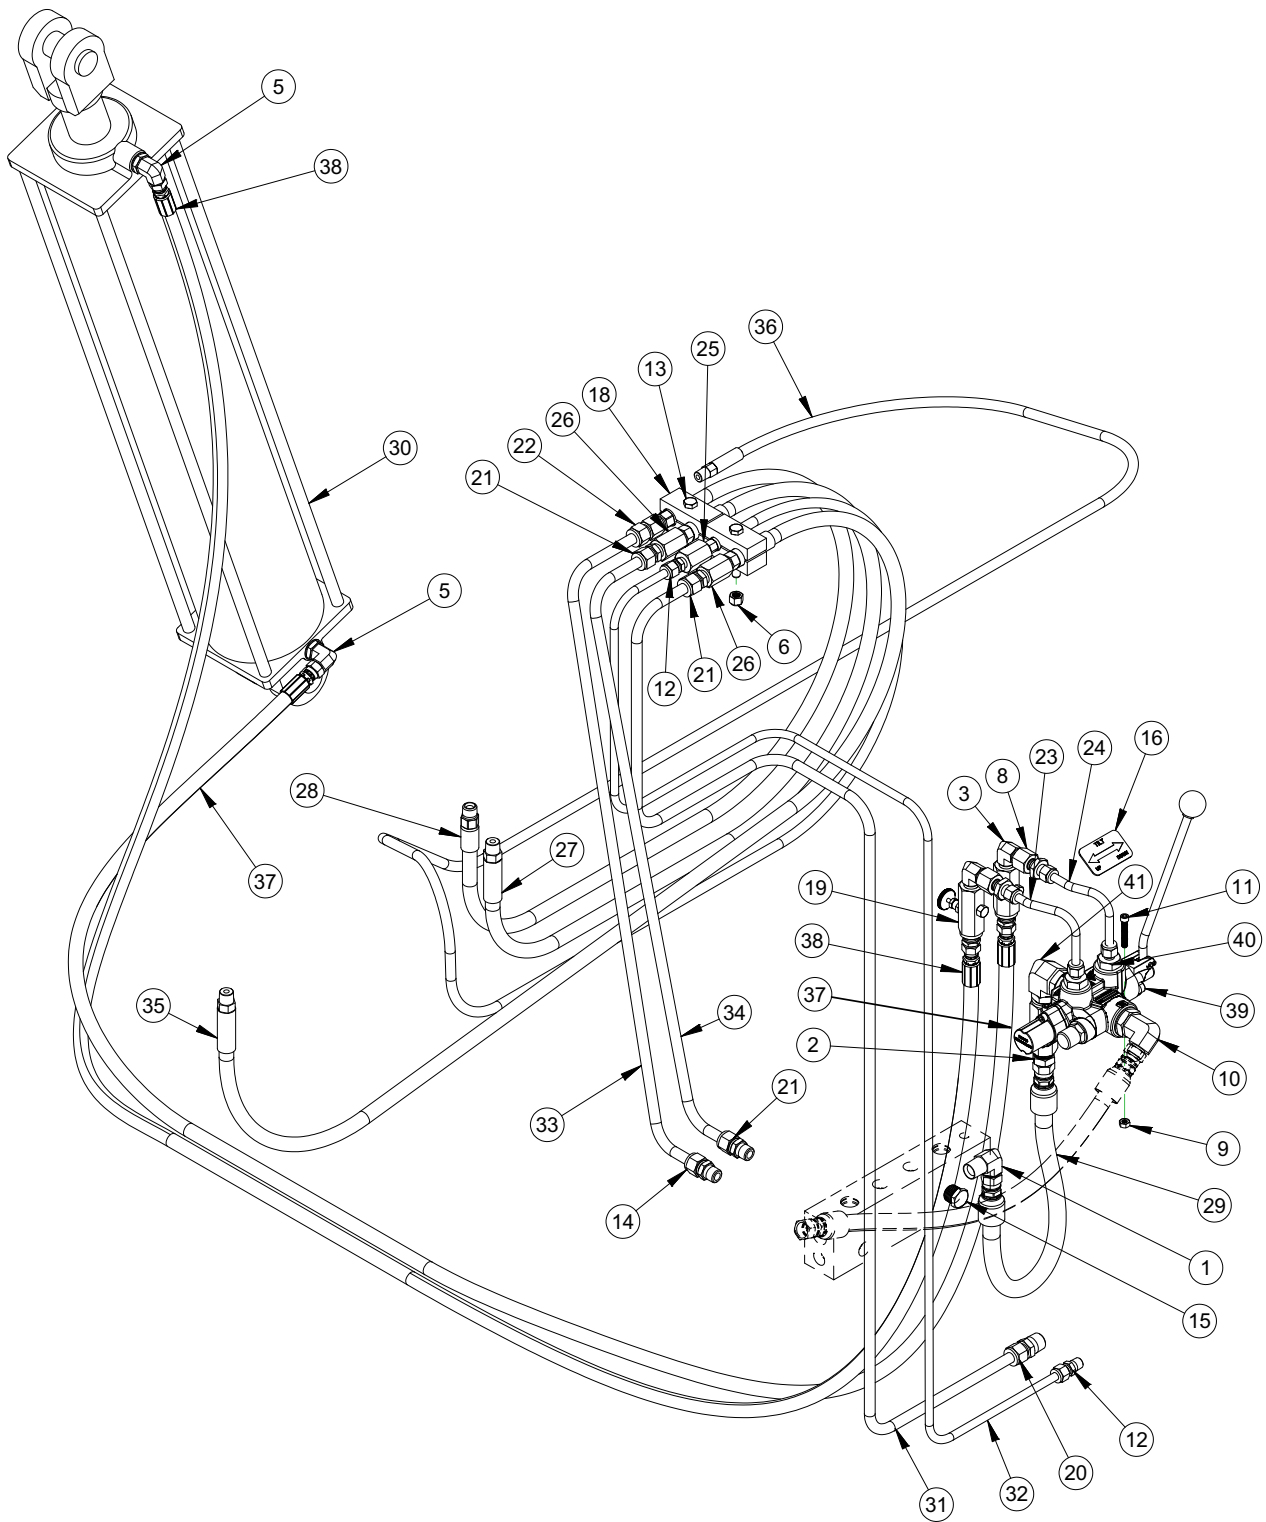


FIGURE A-10. TILT MODEL KIT ASSEMBLY (P/N 90056)

PARTS LIST				
ITEM	QTY	P/N:	DESCRIPTION	SCHEMATIC ID
1	1	12974	FTG ELBOW 1/2 NPTM X JIC-8 MALE 90 DEG	
2	1	13253	FTG ADAPTER 1/2 NPTM X #8 JICM	
3	2	18238	FITTING ELBOW 3/8 NPTM 90°	
4	2	59196	FITTING STRAIGHT SAE-6 MALE X 3/8 NPTM	
5	2	59382	FTG ELBOW SAE-8M TO JIC-6M 90 DEG	
6	2	70385	NUT 3/8-16 NYLON INSERT LOCKING NUT ZINC PLATED GRADE 5	
7	1	75788	FTG REDUCER NIPPLE 3/4 NPTM X 1/2 NPTM HEX	
8	2	77465	FTG BULKHEAD 3/8 NPTF X 3/8 TUBE	
9	3	77606	NUT 1/4-20 HEX STAINLESS 316	
10	1	78143	FTG ELBOW SAE-12M X JIC-8M	
11	3	79131	SCREW 1/4-20 X 1-1/2 SHCS SS	
12	2	83105	FTG TUBE CONNECTOR 1/4 NPTM X 3/8 TUBE SUPER DUPLEX	
13	2	83274	SCREW 3/8-16 X 2 1/2 HHCS SS	
14	1	84839	FTG MALE CONNECTOR 1/2 TUBE X 3/8 MNPT SS	
15	1	86005	PLUG 1/2 NPT BRASS	
16	1	87888	LABEL TILT OPTION USV	
17	1	88044	FTG CHECK VALVE 1/2 FEMALE NPT X 1/2 FEMALE NPT 2000 PSI	DV-10
18	1	88084	CLAMP SET HOSE ANCHOR	
19	2	88092	VALVE NEEDLE 3/8 NPTF 2000 PSI BRASS	NV-10, NV-11
20	1	88115	FTG CONNECTOR MALE 1/2 NPT X 1/2 TUBE SUPER DUPLEX	
21	3	88116	FTG CONNECTOR MALE 3/8 NPT X 1/2 TUBE SUPER DUPLEX	
22	1	88185	FTG CONNECTOR FEMALE 1/2 TUBE x 3/8 NPTF	
23	1	88219	TUBE 3/8 TILT CONTROL A	
24	1	88220	TUBE 3/8 TILT CONTROL B	
25	1	88225	FTG COUPLER 1/4 NPTF X 1/4 NPTF 15000 PSI SS	
26	2	88226	FTG COUPLER 3/8 NPTF X 3/8 NPTF 15000 PSI SS	
27	1	88228	HOSE ASSY .39 ID 3/8 NPTM X 3/8 NPTM X 56.1 IN OAL 15KSI (10/2W)	
28	1	88232	HOSE ASSY 3 KSI 3/8 NPTM X 54.9 OAL STRAIGHT ENDS	
29	1	89062	HOSE ASSY 3 KSI 1/2 JIC-8F X 22.7 OAL STRAIGHT ENDS	
30	1	90022	CYLINDER HYDRAULIC TILT W/PINS 5 IN BORE 20 IN STROKE	C-10
31	1	90085	TUBE 1/2 SUPER DUPLEX INLET BOTTOM PLATE CLAMP FIXT 300T	
32	1	90086	TUBE 3/8 SUPER DUPLEX INLET PLATE CLAMP FIXT 300T	
33	1	90091	TUBE SS 1/2 CONSOLE TO FRAME USV-300T	
34	1	90092	TUBE 1/2 SUPER DUPLEX CONSOLE TO FRAME CLAMP FIXTURE 300T	
35	1	90093	HOSE ASSY .39 ID 3/8 NPTM SS X 3/8 NPTM SS X 74 IN OAL 15KSI (10/2W)	
36	1	90094	HOSE ASSY .23 ID 3/8 NPTM SS X 3/8 NPTM SS X 150 IN OAL 17.4KSI (6/2WL)	
37	1	90099	HOSE ASSY 3 KSI 3/8 JIC-6F X 105 OAL STRAIGHT ENDS	
38	1	90100	HOSE ASSY 3 KSI 3/8 JIC-6F X 126 OAL STRAIGHT ENDS	
39	1	90478	VALVE HYD CONTROL MANUAL 4-WAY 3 POS SPRING CENTER MOTOR SPOOL SAE PORT	V-10
40	2	90523	FTG CONNECTOR 3/8 TUBE X 7/8-14 M SAE SS	
41	1	90524	FTG ELBOW SAE-12M X 3/4 NPTF STEEL	


FIGURE A-11. TILT MODEL KIT PARTS LIST (P/N 90056)

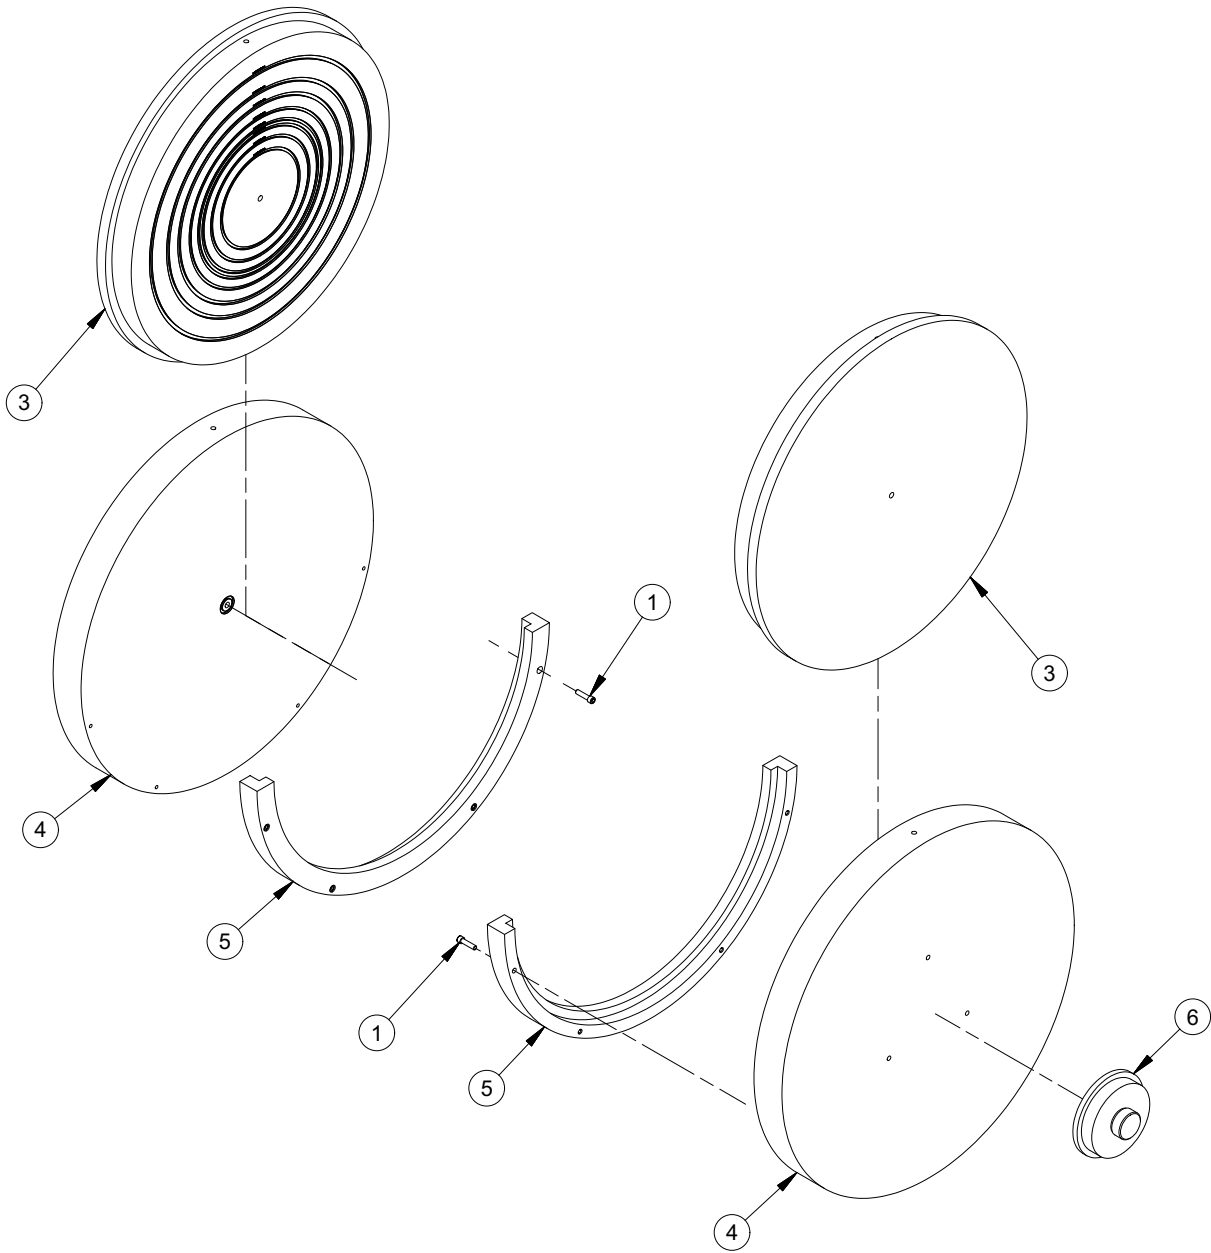

PARTS LIST			
ITEM	QTY	P/N:	DESCRIPTION
1	8	13907	SCREW 3/8-16 X 1-1/2 SHCS STAINLESS
2	4	86774	(NOT SHOWN) O-RING 1-1/8 ID X 1-1/2 OD X 3/16 W NITRILE 90 DUROMETER (2-320)
3	1	88671	KIT - SEAL PLATES EASY OUT WITH 8"-24" O-RINGS
4	2	89976	HOLDER SEAL HEAD EASY OUT 24"
5	1	89977	PAIR CRADLE SEAL HEAD EASY OUT 24"
6	1	89978	CYLINDER HEAD 300 TON


FIGURE A-12. EASY OUT HOLDER ASSEMBLY (P/N 89975)



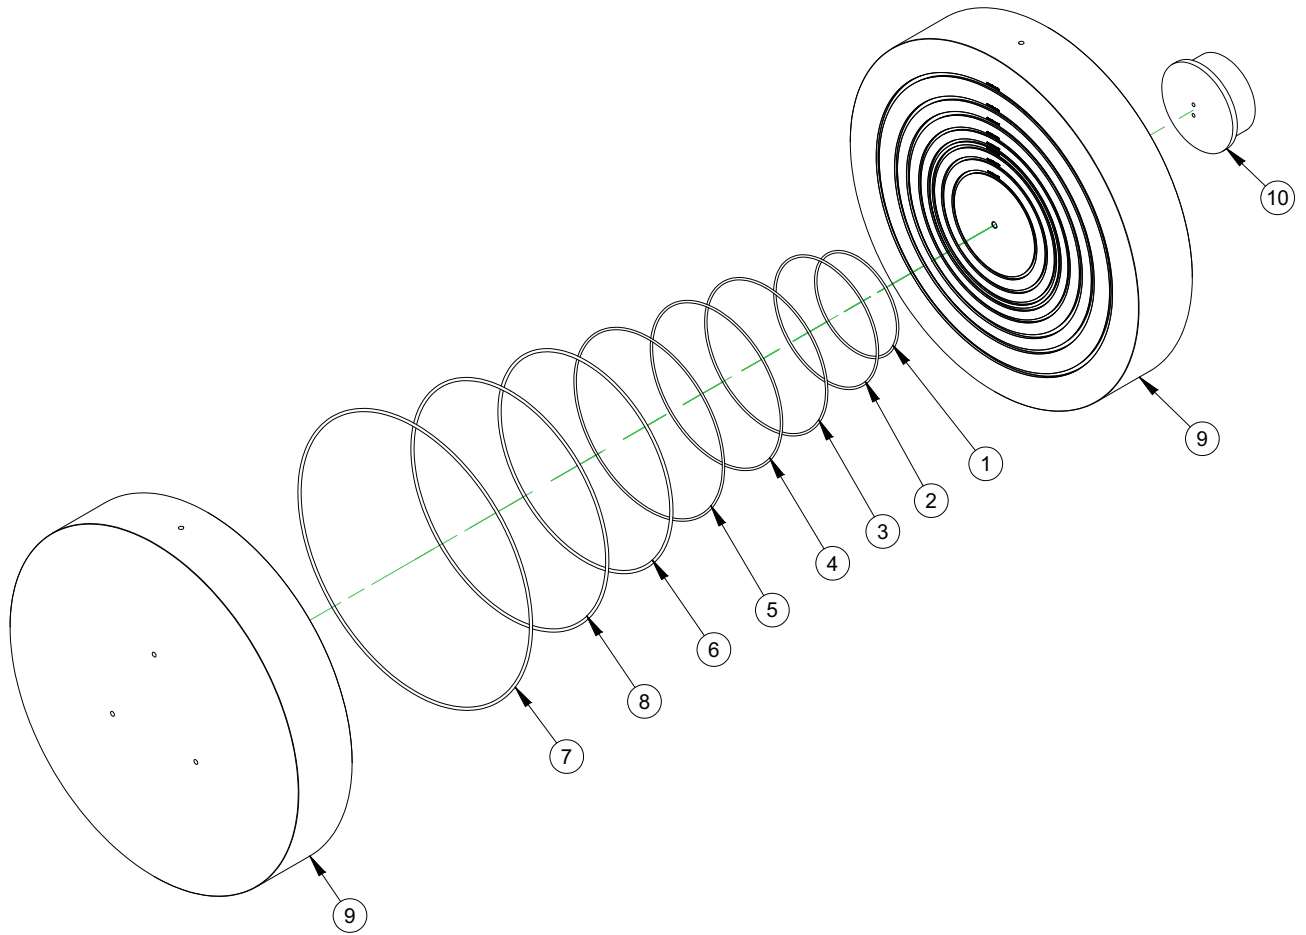

PARTS LIST			
ITEM	QTY	P/N:	DESCRIPTION
1	4	78458	O-RING 8-3/4 ID X 9-1/8 OD X 3/16 W NITRILE 90 DUROMETER (2-372)
2	4	78513	O-RING 11 ID X 11-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-379)
3	4	78514	O-RING 13 ID X 13-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-382)
4	4	78590	O-RING 14 ID X 14-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-383)
5	4	78591	O-RING 16 ID X 16-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-385)
6	4	82729	O-RING 18-1/2 ID X 19 OD X 1/4 W NITRILE 90 DUROMETER (2-466)
7	4	82731	O-RING 25 ID X 25-1/2 OD X 1/4 W NITRILE 90 DUROMETER (2-474)
8	4	90054	O-RING 21 ID X 21-1/2 OD X 1/4 W NITRILE 90 DUROMETER (2-470)
9	2	90825	SEAL PLATE FIXED 8"-24" O-RINGS
10	1	90827	CYLINDER HEAD 300 TON

FIGURE A-13. FIXED SEAL PLATES KIT ASSEMBLY (P/N 90104)

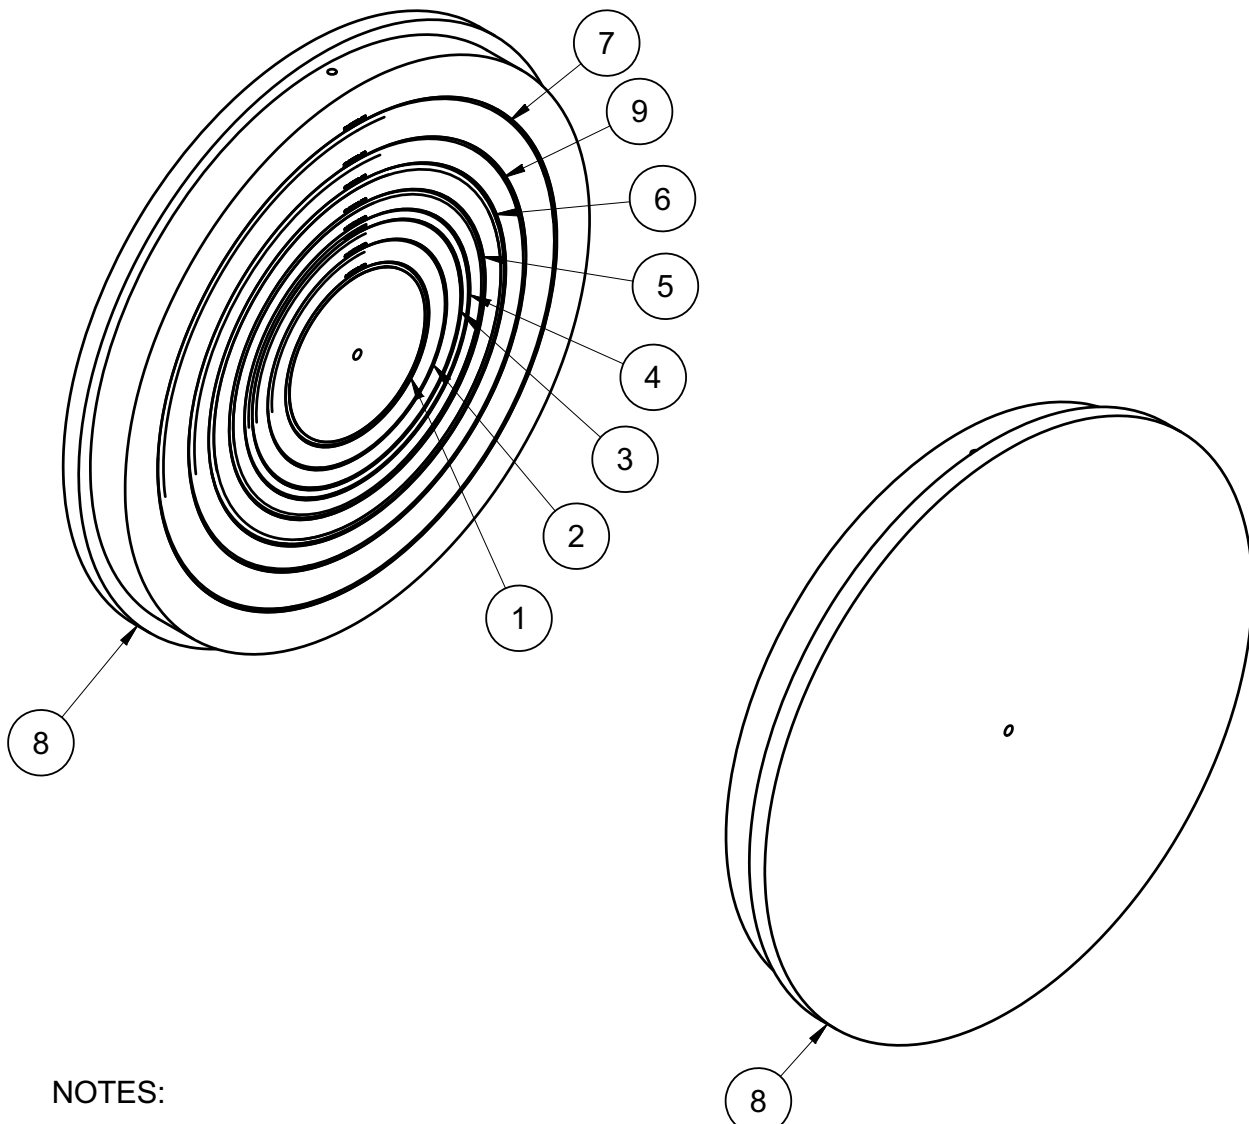

**NOTES:**

1. TWO SETS OF O-RINGS INCLUDED, ONE FOR INSTALLATION, ONE FOR SPARE.

PARTS LIST			
ITEM	QTY	P/N:	DESCRIPTION
1	4	78458	O-RING 8-3/4 ID X 9-1/8 OD X 3/16 W NITRILE 90 DUROMETER (2-372)
2	4	78513	O-RING 11 ID X 11-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-379)
3	4	78514	O-RING 13 ID X 13-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-382)
4	4	78590	O-RING 14 ID X 14-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-383)
5	4	78591	O-RING 16 ID X 16-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-385)
6	4	82729	O-RING 18-1/2 ID X 19 OD X 1/4 W NITRILE 90 DUROMETER (2-466)
7	4	82731	O-RING 25 ID X 25-1/2 OD X 1/4 W NITRILE 90 DUROMETER (2-474)
8	2	89982	SEAL PLATE EASY OUT 8"-24" O-RINGS
9	4	90054	O-RING 21 ID X 21-1/2 OD X 1/4 W NITRILE 90 DUROMETER (2-470)

**FIGURE A-14. SEAL PLATES EASY-OUT O-RING KIT (P/N 88671)**

**TABLE A-1. KIT – NON-TILT (P/N 88276)**

<b>Part number</b>	<b>Description</b>	<b>Quantity</b>
12974	FTG ELBOW 1/2 NPTM X JIC-8 MALE 90 DEG	1
33991	FTG PLUG 3/4 NPTM HEX BRASS	1
85904	WASHER 3/4 FLTW 18-8 STAINLESS	1
86005	PLUG 1/2 NPT BRASS	2
88227	HOSE ASSY .39 ID 3/8 NPTM SS X 3/8 NPTM SS X 60.8 IN OAL 15KSI (10/2W)	1
88277	HOSE ASSY .23 ID 1/4 NPTM SS X 1/4 NPTM SS X 144 IN OAL 17.4KSI (6/2WL)	1
88278	HOSE ASSY .39 ID 3/8 NPTM SS X 1/2 NPTM SS X 67 IN OAL 15KSI (10/2W)	1
88279	HOSE ASSY 3 KSI 3/8 NPTM X 60 OAL STRAIGHT ENDS	1
88285	SCREW 3/4-10 x 1-1/2 HHCS 18-8 SS	1

**TABLE A-2. SPARE PARTS LIST**

<b>Part number</b>	<b>Description</b>	<b>Quantity</b>
78458	O-RING 8-3/4 ID X 9-1/8 OD X 3/16 W NITRILE 90 DUROMETER (2-372)	4
78513	O-RING 11 ID X 11-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-379)	4
78514	O-RING 13 ID X 13-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-382)	4
78590	O-RING 14 ID X 14-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-383)	4
78591	O-RING 16 ID X 16-3/8 OD X 3/16 W NITRILE 90 DUROMETER (2-385)	4
82729	O-RING 18-1/2 ID X 19 OD X 1/4 W NITRILE 90 DUROMETER (2-466)	4
90054	O-RING 21 ID X 21-1/2 OD X 1/4 W NITRILE 90 DUROMETER (2-470)	4
82731	O-RING 24 ID X 24-1/2 OD X 1/4 W NITRILE 90 DUROMETER (2-474)	4

---

This page intentionally left blank

# APPENDIX B SCHEMATICS

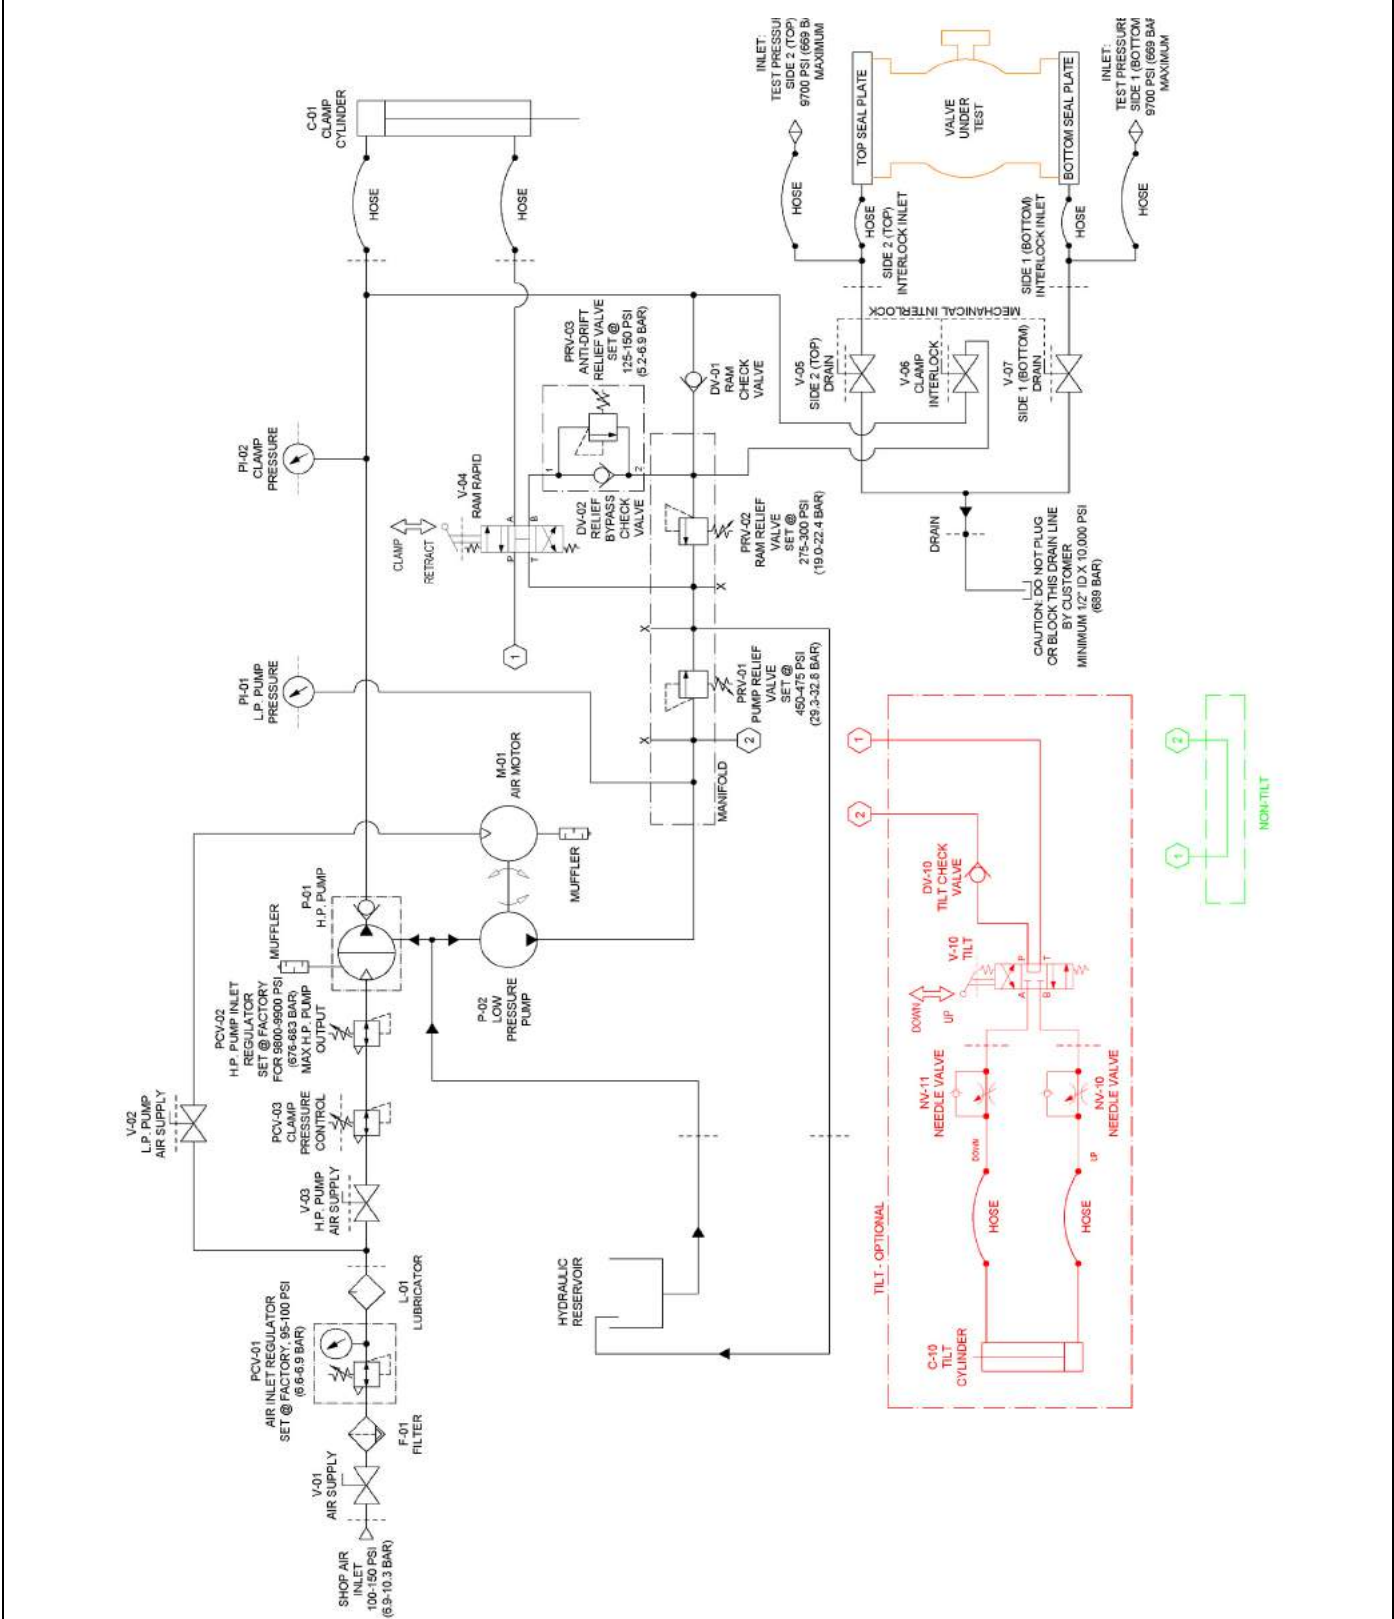


FIGURE B-1. SCHEMATIC P/N 89028

---

This page intentionally left blank

## APPENDIX C SDS

### *Safety Data Sheet list*

Conoco AW 32 Unax .....52





<u>OTHER COMPONENTS</u>	<u>% WEIGHT</u>	<u>EXPOSURE GUIDELINE</u>		
		<u>Limits</u>	<u>Agency</u>	<u>Type</u>
Lubricant Base Oil (Petroleum) CAS# Various	>99	(See: Oil Mist, If Generated)		
Additives CAS# Proprietary	<1	Not Established		

<u>REFERENCE</u>	<u>EXPOSURE GUIDELINE</u>		
	<u>Limits</u>	<u>Agency</u>	<u>Type</u>
Oil Mist, If Generated	5 mg/m <sup>3</sup>	ACGIH	TWA
CAS# None	10 mg/m <sup>3</sup>	ACGIH	STEL
	5 mg/m <sup>3</sup>	OSHA	TWA
	2500 mg/m <sup>3</sup>	NIOSH	IDLH
	5 mg/m <sup>3</sup>	NOHSC	TWA

The base oil for this product can be a mixture of any of the following highly refined petroleum streams:  
 CAS 64741-88-4; CAS 64741-89-5; CAS 64741-96-4; CAS 64741-97-5; CAS 64742-01-4; CAS 64742-52-5; CAS  
 64742-53-6; CAS 64742-54-7; CAS 64742-55-8; CAS 64742-56-9; CAS 64742-57-0; CAS 64742-62-7; CAS  
 64742-63-8; CAS 64742-65-0; CAS 72623-85-9; CAS 72623-86-0; CAS 72623-87-1

Note: State, local or other agencies or advisory groups may have established more stringent limits.  
 Consult an industrial hygienist or similar professional, or your local agencies, for further information.

1%=10,000 PPM.

All components are listed on the TSCA inventory.

### 3. HAZARDS IDENTIFICATION

**Potential Health Effects:**

**Eye:** Contact may cause mild eye irritation including stinging, watering, and redness.

**Skin:** Contact may cause mild skin irritation including redness, and a burning sensation. Prolonged or repeated contact can worsen irritation by causing drying and cracking of the skin leading to dermatitis (inflammation). No harmful effects from skin absorption are expected.

**Inhalation (Breathing):** No information available. Studies by other exposure routes suggest a low degree of toxicity by inhalation.

**Ingestion (Swallowing):** No harmful effects expected from ingestion.

**Signs and Symptoms:** Effects of overexposure may include irritation of the nose and throat, irritation of the digestive tract, nausea and diarrhea.

**Cancer:** Inadequate evidence available to evaluate the cancer hazard of this material. See Section 11 for carcinogenicity information of individual components, if any.

**Target Organs:** No data available for this material.

**Developmental:** No data available for this material.

**Pre-Existing Medical Conditions:** Conditions aggravated by exposure may include skin disorders.

## 4. FIRST AID MEASURES

**Eye:** If irritation or redness develops, move victim away from exposure and into fresh air. Flush eyes with clean water. If symptoms persist, seek medical attention.

**Skin:** Wipe material from skin and remove contaminated shoes and clothing. Cleanse affected area(s) thoroughly by washing with mild soap and water and, if necessary, a waterless skin cleanser. If irritation or redness develops and persists, seek medical attention.

**Inhalation (Breathing):** If respiratory symptoms develop, move victim away from source of exposure and into fresh air. If symptoms persist, seek medical attention. If victim is not breathing, clear airway and immediately begin artificial respiration. If breathing difficulties develop, oxygen should be administered by qualified personnel. Seek immediate medical attention.

**Ingestion (Swallowing):** First aid is not normally required; however, if swallowed and symptoms develop, seek medical attention.

**Note To Physicians:** High-pressure hydrocarbon injection injuries may produce substantial necrosis of underlying tissue despite an innocuous appearing external wound. Often these injuries require extensive emergency surgical debridement and all injuries should be evaluated by a specialist in order to assess the extent of injury.

## 5. FIRE FIGHTING MEASURES

**Flammable Properties:** Flash Point: >384°F/>196°C (COC)  
OSHA Flammability Class: Not applicable  
LEL/UEL%: No Data  
Autoignition Temperature: No Data

**Unusual Fire & Explosion Hazards:** This material may burn, but will not ignite readily. If container is not properly cooled, it can rupture in the heat of a fire.

**Extinguishing Media:** Dry chemical, carbon dioxide, foam, or water spray is recommended. Water or foam may cause frothing of materials heated above 212°F. Carbon dioxide can displace oxygen. Use caution when applying carbon dioxide in confined spaces.

**Fire Fighting Instructions:** For fires beyond the incipient stage, emergency responders in the immediate hazard area should wear bunker gear. When the potential chemical hazard is unknown, in enclosed or confined spaces, or when explicitly required by DOT, a self contained breathing apparatus should be worn. In addition, wear other appropriate protective equipment as conditions warrant (see Section 8).

Isolate immediate hazard area, keep unauthorized personnel out. Stop spill/release if it can be done with minimal risk. Move undamaged containers from immediate hazard area if it can be done with minimal risk.

Water spray may be useful in minimizing or dispersing vapors and to protect personnel. Cool equipment exposed to fire with water, if it can be done with minimal risk. Avoid spreading burning liquid with water used for cooling purposes.

## 6. ACCIDENTAL RELEASE MEASURES

This material may burn, but will not ignite readily. Keep all sources of ignition away from spill/release. Stay upwind and away from spill/release. Notify persons down wind of the spill/release, isolate immediate hazard area and keep unauthorized personnel out. Stop spill/release if it can be done with minimal risk. Wear appropriate protective equipment including respiratory protection as conditions warrant (see Section 8).

(MSDS: 722330)

Page 4 of 7

Prevent spilled material from entering sewers, storm drains, other unauthorized drainage systems, and natural waterways. Dike far ahead of spill for later recovery or disposal. Spilled material may be absorbed into an appropriate absorbent material.

Notify fire authorities and appropriate federal, state, and local agencies. Immediate cleanup of any spill is recommended. If spill of any amount is made into or upon navigable waters, the contiguous zone, or adjoining shorelines, notify the National Response Center (phone number 800-424-8802).

## 7. HANDLING AND STORAGE

**Handling:** Do not enter confined spaces such as tanks or pits without following proper entry procedures such as ASTM D-4276 and 29CFR 1910.146. The use of appropriate respiratory protection is advised when concentrations exceed any established exposure limits (see Sections 2 and 8).

Do not wear contaminated clothing or shoes. Use good personal hygiene practices.

High pressure injection of hydrocarbon fuels, hydraulic oils or greases under the skin may have serious consequences even though no symptoms or injury may be apparent. This can happen accidentally when using high pressure equipment such as high pressure grease guns, fuel injection apparatus or from pinhole leaks in tubing of high pressure hydraulic oil equipment.

"Empty" containers retain residue and may be dangerous. Do not pressurize, cut, weld, braze, solder, drill, grind, or expose such containers to heat, flame, sparks, or other sources of ignition. They may explode and cause injury or death. "Empty" drums should be completely drained, properly bunged, and promptly shipped to the supplier or a drum reconditioner. All containers should be disposed of in an environmentally safe manner and in accordance with governmental regulations.

Before working on or in tanks which contain or have contained this material, refer to OSHA regulations, ANSI Z49.1 and other references pertaining to cleaning, repairing, welding, or other contemplated operations.

**Storage:** Keep container(s) tightly closed. Use and store this material in cool, dry, well-ventilated areas away from heat and all sources of ignition. Store only in approved containers. Keep away from any incompatible material (see Section 10). Protect container(s) against physical damage.

## 8. EXPOSURE CONTROLS/PERSONAL PROTECTION

**Engineering controls:** If current ventilation practices are not adequate to maintain airborne concentrations below the established exposure limits (see Section 2), additional engineering controls may be required.

### Personal Protective Equipment (PPE):

**Respiratory:** A NIOSH certified air purifying respirator with a Type 95 (R or P) particulate filter may be used under conditions where airborne concentrations are expected to exceed exposure limits (see Section 2).

Protection provided by air purifying respirators is limited (see manufacturer's respirator selection guide). Use a NIOSH approved self-contained breathing apparatus (SCBA) or equivalent operated in a pressure demand or other positive pressure mode if there is potential for an uncontrolled release, exposure levels are not known, or any other circumstances where air purifying respirators may not provide adequate protection. A respiratory protection program that meets OSHA's 29 CFR 1910.134 and ANSI Z88.2 requirements must be followed whenever workplace conditions warrant a respirator's use.

**Skin:** The use of gloves impervious to the specific material handled is advised to prevent skin contact and possible irritation (see manufacturers literature for information on permeability).

**Eye/Face:** Approved eye protection to safeguard against potential eye contact, irritation, or injury is recommended. Depending on conditions of use, a face shield may be necessary.

**Other Protective Equipment:** A source of clean water should be available in the work area for flushing eyes and skin. Impervious clothing should be worn as needed.

Suggestions for the use of specific protective materials are based on readily available published data. Users should check with specific manufacturers to confirm the performance of their products.

## 9. PHYSICAL AND CHEMICAL PROPERTIES

Note: Unless otherwise stated, values are determined at 20°C (68°F) and 760 mm Hg (1 atm).

Appearance: Clear and bright

Physical State: Liquid

Odor: Mild petroleum

pH: Not applicable

Vapor Pressure (mm Hg): <1

Vapor Density (air=1): >1

Boiling Point/Range: No Data

Freezing/Melting Point: <-27°F / <-33°C

Solubility in Water: Negligible

Specific Gravity: 0.855-0.871

Percent Volatile: Negligible

Evaporation Rate (nBuAc=1): Negligible

Viscosity: 22-68 cSt @ 40°C / 4.3-8.7 cSt @ 100°C

Bulk Density: 7.13-7.26 lb/gal

Flash Point: >384°F / >196°C (COC)

Flammable/Explosive Limits (%): No Data

## 10. STABILITY AND REACTIVITY

**Stability:** Stable under normal ambient and anticipated storage and handling conditions of temperature and pressure.

**Conditions To Avoid:** Extended exposure to high temperatures can cause decomposition.

**Materials to Avoid (Incompatible Materials):** Avoid contact with strong oxidizing agents.

**Hazardous Decomposition Products:** Combustion can yield carbon, nitrogen, sulfur, phosphorus, and zinc oxides.

**Hazardous Polymerization:** Will not occur.

## 11. TOXICOLOGICAL INFORMATION

### Lubricant Base Oil (Petroleum) (CAS# Various)

**Carcinogenicity:** The petroleum base oils contained in this product have been highly refined by a variety of processes including solvent extraction, hydrotreating, and dewaxing to remove aromatics and improve performance characteristics. None of the oils used are listed as a carcinogen by NTP, IARC, or OSHA.

## 12. ECOLOGICAL INFORMATION

Not evaluated at this time

(MSDS: 722330)

Page 6 of 7

### 13. DISPOSAL CONSIDERATIONS

This material under most intended uses would become used oil due to contamination by physical or chemical impurities. RECYCLE ALL USED OIL. While being recycled, used oil is regulated by 40 CFR 279. Use resulting in chemical or physical change or contamination may also subject it to regulation as hazardous waste. Under federal regulations, used oil is a solid waste managed under 40 CFR 279. However, in California, used oil is managed as hazardous waste until tested to show it is not hazardous. Consult state and local regulations regarding the proper handling of used oil. In the case of used oil, the intent to discard it may cause the used oil to be regulated as hazardous waste.

Contents should be completely used and containers emptied prior to discard. Rinsate may be considered a RCRA hazardous waste and must be disposed of with care and in compliance with federal, state and local regulations. Large empty containers, such as drums, should be returned to the distributor or a drum reconditioner. To assure proper disposal of small empty containers, consult with state and local regulations and disposal authorities.

### 14. TRANSPORT INFORMATION

DOT Shipping Description: Not classified as hazardous

### 15. REGULATORY INFORMATION

**EPA SARA 311/312 (Title III Hazard Categories):**

Acute Health: No  
 Chronic Health: No  
 Fire Hazard: No  
 Pressure Hazard: No  
 Reactive Hazard: No

**SARA 313 and 40 CFR 372:**

This material contains the following chemicals subject to the reporting requirements of SARA 313 and 40 CFR 372:

Component	CAS Number	Weight %
Zinc Compound	Proprietary	<1

**California Proposition 65:**

**Warning:** This material contains the following chemicals which are known to the State of California to cause cancer, birth defects or other reproductive harm, and are subject to the requirements of California Proposition 65 (CA Health & Safety Code Section 25249.5):

--None Known--

**Carcinogen Identification:**

This material has not been identified as a carcinogen by NTP, IARC, or OSHA. See Section 11 for carcinogenicity information of individual components, if any.

**EPA (CERCLA) Reportable Quantity:**

--None--

**Canada - Domestic Substances List:** Listed

**WHMIS Class:**

Not regulated

This product has been classified in accordance with the hazard criteria of the Controlled Products Regulations (CPR) and the MSDS contains all the information required by the CPR.

### 16. OTHER INFORMATION

Issue Date: 02/06/03

---

(MSDS: 722330)

Page 7 of 7

**Previous Issue Date:** 01/01/02  
**Product Code:** 4641032000, 4642046000, 4643068000  
**Revised Sections:** New Format  
**Previous Product Code:** 4641032000  
**MSDS Number:** 722330  
**Status:** Final

**Disclaimer of Expressed and Implied Warranties:**

The information presented in this Material Safety Data Sheet is based on data believed to be accurate as of the date this Material Safety Data Sheet was prepared. **HOWEVER, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, OR ANY OTHER WARRANTY IS EXPRESSED OR IS TO BE IMPLIED REGARDING THE ACCURACY OR COMPLETENESS OF THE INFORMATION PROVIDED ABOVE, THE RESULTS TO BE OBTAINED FROM THE USE OF THIS INFORMATION OR THE PRODUCT, THE SAFETY OF THIS PRODUCT, OR THE HAZARDS RELATED TO ITS USE.** No responsibility is assumed for any damage or injury resulting from abnormal use or from any failure to adhere to recommended practices. The information provided above, and the product, are furnished on the condition that the person receiving them shall make their own determination as to the suitability of the product for their particular purpose and on the condition that they assume the risk of their use. In addition, no authorization is given nor implied to practice any patented invention without a license.



 **CLIMAX**

---

 **BORTECH**  **CALDER** **H&S** **TOOL**